

Panasonic

5.8 GHz Expandable Cordless Phone System

Operating Instructions

Model No. **KX-TG5230AL**



The unit is Caller ID compatible. To display the caller's phone number, you must subscribe to Caller ID service.

PLEASE READ BEFORE USE AND SAVE.

Charge the battery for 6 hours before initial use.

Thank you for purchasing your new Panasonic cordless telephone.

When you subscribe to Caller ID services from your telephone operator, this telephone will display the caller's phone number. When available from your telephone operator, this telephone will also display the number of the second call or call waiting.

For your future reference

Serial No. _____

Date of purchase _____


(found on the bottom of the unit)

Name and address of dealer _____

Attach or keep original receipt to assist with any repair under warranty.

Accessories (included)

☐ AC Adaptor (p. 11)

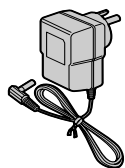


one

☐ Telephone Line Cord (p. 11)




one

 ☐ Telephone Plug (p. 11)




one

☐ Handset Cover (p. 12)

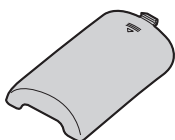


one

☐ Battery (p. 12)

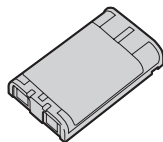


one

☐ Belt Clip (p. 57)

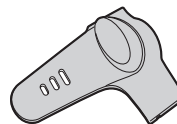

one

☐ Wall Mounting Adaptor (p. 58)

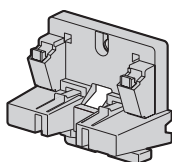


one

Expanding Your Phone

KX-TG5230AL includes one handset and one base unit. You can expand the system by adding up to 3 accessory handsets, sold separately. A maximum of 4 handsets can be registered to the base unit.

The model number of the accessory handset is KX-TGA520AL. A charger is included with each accessory handset.

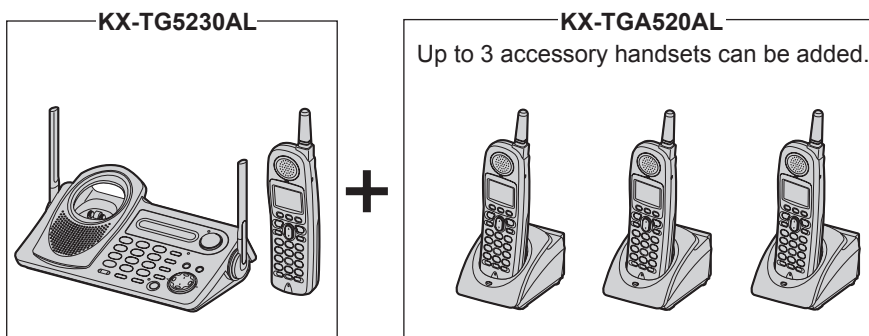

The included handset is pre-registered at the factory and assigned the extension number 1.
After purchasing accessory handsets, you must register each to the base unit.
(Please read the accessory handset's Installation Manual.)

Contents

Preparation

For Best Performance	6
Location of Controls	7
Display	10
Installation	11
Connections	11
Installing the Battery in the Handset.	12
Battery Charge	12
Programmable Settings	14
Programming Guidelines.	14
Function Menu Table	15
Ringer Volume	16
Ringer Tone	17
Auto Talk.	19
LCD Contrast	19
Storing Your Area Code	20
Line Mode	21
Dialling Mode	21

Basic Operation

Making Calls	22
Using the Handset.	22
Using the Base Unit	25
Answering Calls	26
Caller ID Service	27
Talking Caller ID	28
Using the Caller List	30
Viewing the Caller List.	30
Calling Back from the Caller List	31
Editing the Caller's Phone Number	32
Storing Caller Information in the Phone Book.	33
Erasing Caller Information.	33

Advanced Operation

Phone Book	34
Storing Names and Numbers	34
Dialling from the Phone Book	36
Chain Dial	37
Editing an Item in the Phone Book.	38
Erasing an Item in the Phone Book.	38
Copying Items in the Phone Book.	39
Speed Dialler	41
Storing Phone Numbers	41
Dialling a Stored Phone Number	41
Intercom	42
Making Intercom Calls.	42
Answering Intercom Calls	43
Voice Paging	44
Transferring a Call	45
Conference Calls	48
Call Share	48
Room Monitor	49
Special Features	51
Muting Your Conversation.	51
Call Privacy	51
Using the PAUSE Button (For PBX Line/Long Distance Calls).	51
Call Waiting and Caller ID Compatible	52
Key Tone.	52
RECALL Button.	53
Incoming Call Tone	54
Dial Lock	55

Contents

Useful Information

Belt Clip	57
Optional Headset	57
Wall Mounting	58
Direct Commands	61
Cancelling Registration/ Re-registration	63
Cancelling the Handset Registration	63
Re-registering the Handset . . .	64
If the Following Appear on Your Display	65
Troubleshooting	68
Safety Instructions	72
Specifications	73
Important Information	74

Preparation

Basic Operation

Advanced Operation

Useful Information

Important

Throughout these Operating Instructions, **Handset** and **Base Unit** are used to indicate with which unit an operation can be performed.

Handset : Perform with the handset.

Base Unit : Perform with the base unit.

Handset Base Unit : Perform with the handset and base unit separately.

Handset & Base Unit : Perform with the handset and base unit together.

For Best Performance

Battery charge

The handset is powered by a rechargeable Nickel-Metal Hydride (Ni-MH) battery. Charge the battery for **6 hours** before initial use (p. 12).

- **As preventative maintenance, clean the handset and base unit charge contacts with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** Otherwise the battery may not charge properly.




Base unit location/Noise

Calls are transmitted between the base unit and handset using wireless radio waves. **For maximum distance and noise-free operation**, the recommended base unit location is:

Away from electrical appliances such as a TV, personal computer, cellular phone charging units or another cordless phone.

In a HIGH and CENTRAL location with no obstructions such as walls.

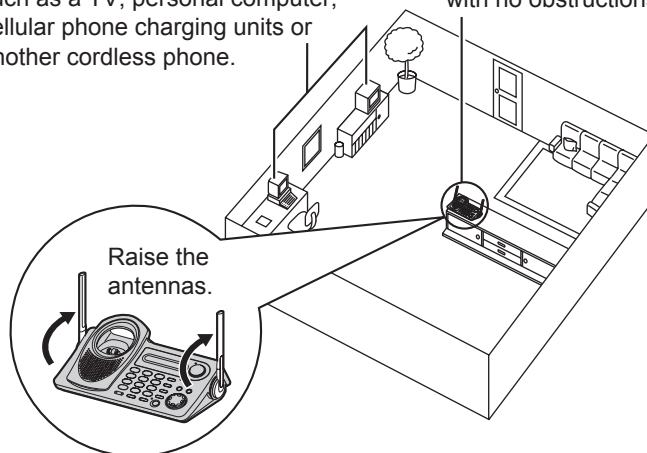


Note:

- If you use the handset near a microwave oven which is being used, noise may be heard from the receiver or the speaker. Move away from the microwave oven and closer to the base unit.
- If you use the handset near another cordless phone's base unit, noise may be heard. Move away from the other cordless phone's base unit and closer to your base unit.

Location of Controls


Base unit

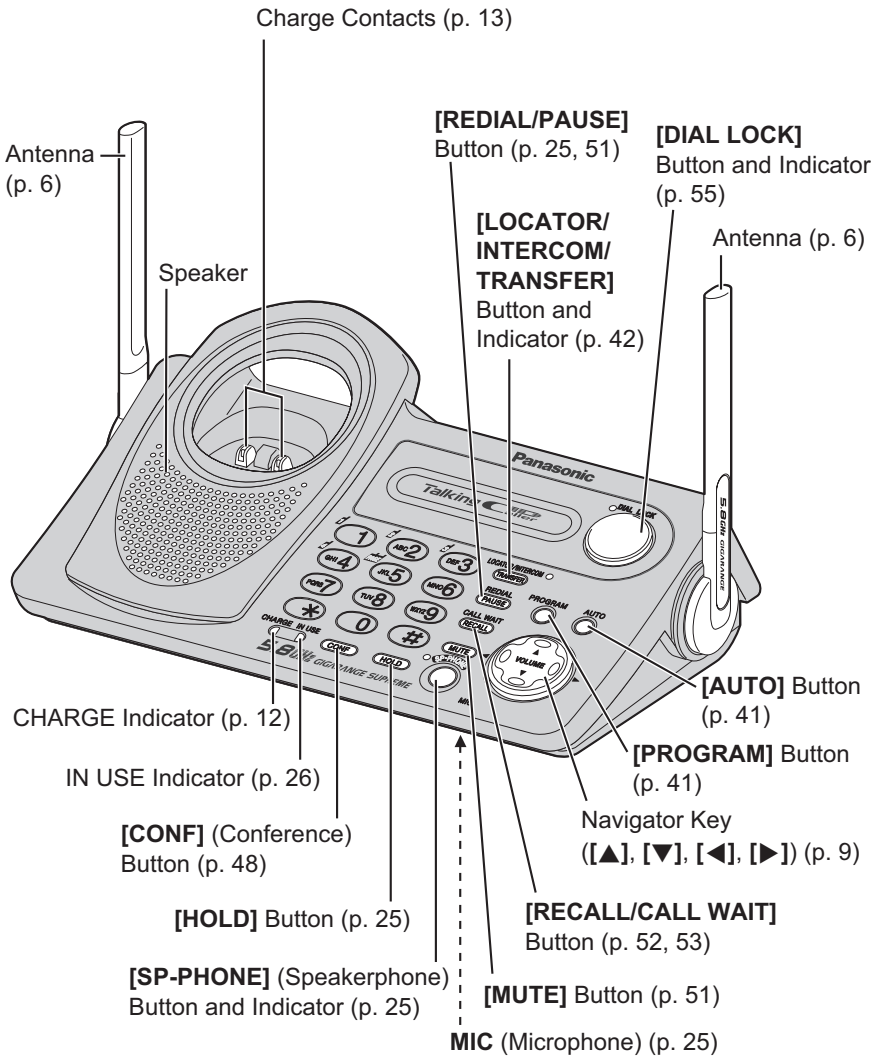

Preparation

Location of Controls

Handset

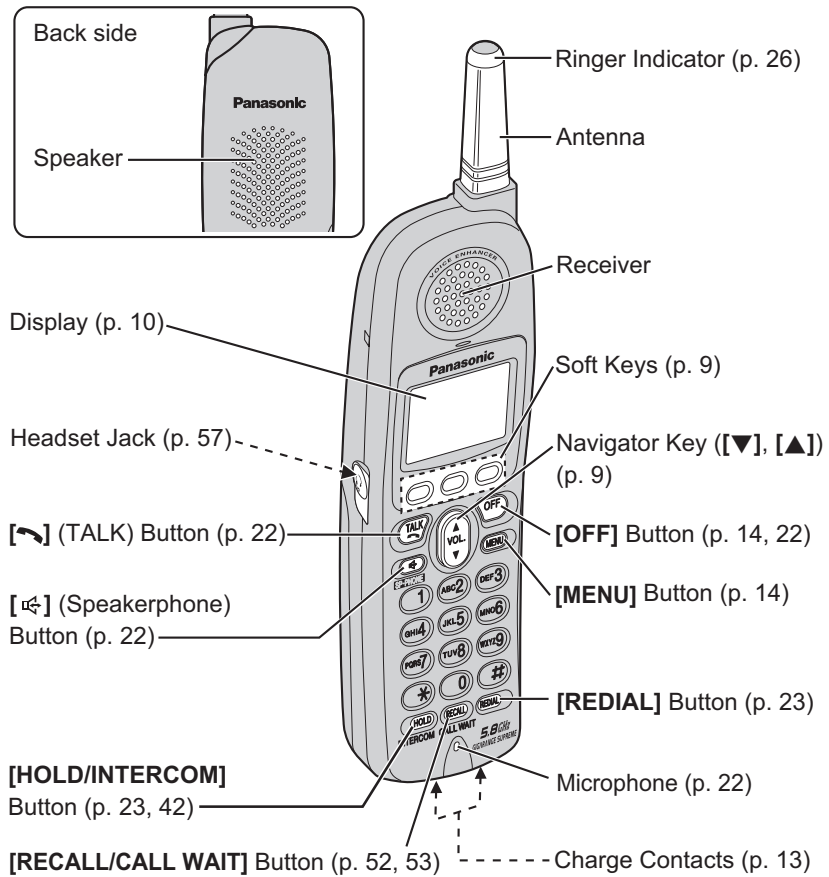

Location of Controls

How to use the soft keys/navigator keys

Handset soft keys



Three soft keys are used to select functions displayed directly above each key. Functions displayed above each key will change depending on the state of use.

On this sample display, "CID" and "Phone Book" are displayed above the soft keys.

Pressing the right soft key selects the Phone Book "Phone Book".

Pressing the left soft key reviews Caller ID information in the Caller List "CID".

- When a function name does not appear above a soft key, the soft key has no function.

Throughout these Operating Instructions, the soft keys are indicated by their icons, such as CID and Phone Book.

Handset navigator key




Scrolls up [▲] and down [▼] the function menu, the Caller List and the phone book.

Increases [▲] or decreases [▼] the handset ringer and receiver/speaker volumes.

Throughout these Operating Instructions, the handset navigator key is indicated by the arrows [▼] or [▲].

Base unit navigator key

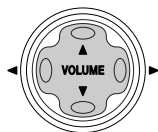


Increases [▲] or decreases [▼] the base unit ringer and speaker volumes.

Selects the base unit ringer tone [◀] and [▶].

Throughout these Operating Instructions, the base unit navigator key is indicated by the arrows [▼], [▲], [◀] or [▶].

Display

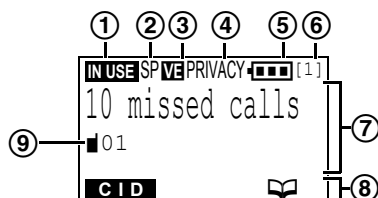

① “IN USE” functions as follows.

Off (invisible)	The line is free.
On	The line is being used.
Flashing	A call is on hold on the handset or base unit.
Flashing rapidly	A call is being received.

② “SP” is shown when you are using the handset speakerphone.


③ “VE” indicates Voice Enhancer mode is on (p. 24).


④ “PRIVACY” indicates Call Privacy mode is on (p. 51). Other extension users cannot join your conversation.

⑤ The battery icon indicates battery strength (p. 12).

⑥ The extension number of your handset is displayed if it has been registered to the base unit (p. 3, 64).

⑦ The display shows the dialled number, call status, programming options, phone book items, Caller ID information, etc.


⑧ The icons on the bottom line indicate the functions of the corresponding soft keys which are located directly below the display (p. 9).
Ex. The soft key below “” (phone book icon) is used when storing or viewing phone book items (p. 34, 36).

⑨ “” (extension icon) and extension numbers are displayed (ex. base unit=“0”, handset 1= “1”)

- a) during an intercom call (p. 42) or a conference call (p. 48);
- b) while monitoring a room (p. 50).

Installation

Connections

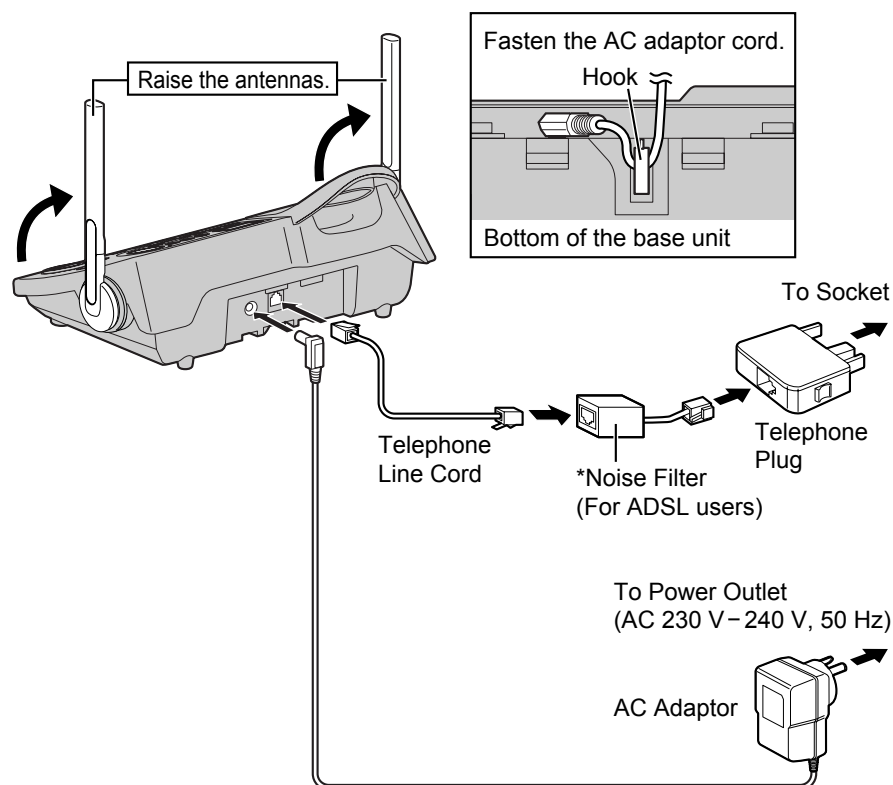


- USE ONLY WITH Panasonic AC ADAPTOR PQLV1AL.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.
- This unit will not function during a power failure. We recommend connecting a standard telephone to the same telephone line or to the same telephone jack using a telephone double adaptor.
- KX-TG5230AL is not designed to be used with rotary (pulse dialling) service.
- * If the unit is connected to a telephone line with ADSL service, you may hear noise from the receiver or speaker during conversations or the unit may not display caller's phone number properly. We recommend connecting a noise filter (contact your ADSL service provider) to the telephone line between the base unit and the telephone line jack.

Installation


Installing the Battery in the Handset

Insert the battery (①), and press it down until it snaps into the compartment (②). Close the cover.

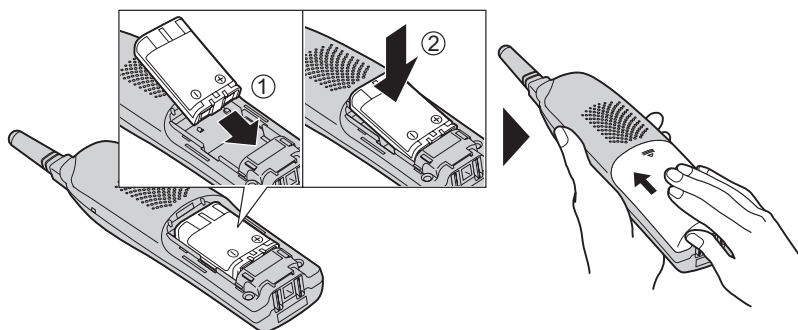

To replace the battery:

Press the notch on the cover firmly and slide it as indicated by the arrow. Replace the old battery with a new one (p. 13). Close the cover and charge the handset for 6 hours.

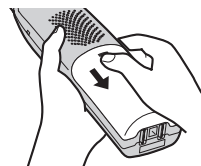

Battery Charge

Place the handset on the base unit for **6 hours** before initial use.

- The unit beeps once, the CHARGE indicator lights and "Charging" is displayed.
- When the battery is fully charged, "Charge completed" is displayed if there are no new calls in the Caller List.



CHARGE Indicator

Battery strength


You can confirm the battery strength on the handset display. Battery strength is indicated by the icons shown in the chart to the right.


Display prompt	Battery strength
	Fully charged
	Medium
	Low
	Needs to be recharged.
	Discharged



Installation

Recharge

Recharge the battery when:


 
- “Recharge battery” is displayed on the handset,
- “” flashes, or
- the handset beeps intermittently while it is in use.

[1]
Recharge battery

- The display will continually indicate “Recharge battery” and/or “” will flash when the handset battery is charged for less than 15 minutes and the handset is lifted off the base unit.
- If the battery has been discharged, the handset will display “Charge for 6 HRS” and “” when you place the handset on the base unit. The handset will not work unless the battery is charged. Continue charging.

Preparation


Battery replacement:

If you cleaned the charge contacts and fully charged the battery, but after a few telephone calls, “Recharge battery” is displayed and/or “” continues to flash, or “Charge for 6 HRS” and “” are displayed, the battery may need to be replaced. Please replace with a new Panasonic HHR-P104 battery. To replace the battery, see page 12.

Battery information

After your Panasonic battery is fully charged, you can expect the following performance:


Operation	Operating time
While in use (TALK)	Up to 5 hours
While not in use (Standby)	Up to 11 days
While using the Clarity Booster feature (p. 24)	Up to 3 hours

- A fully charged battery will give you up to 5 hours of continuous talk time, or keep your handset in Standby mode to receive incoming calls for up to 11 days (if no phone calls are made). Battery power is consumed whenever the handset is off of the base unit, even when the handset is not in use. The longer you leave the handset off of the base unit, the time you can actually talk on the handset will be shortened. Actual battery performance depends on a combination of how often the handset is in TALK mode and how often it is in Standby mode.
- **As preventative maintenance, clean the handset and base unit charge contacts with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** Otherwise the battery may not charge properly.
- If the battery is fully charged, you do not have to place the handset on the base unit until “Recharge battery” is displayed and/or “” flashes. This will maximize the battery life.
- If you want to keep the battery fully charged at all times, place the handset on the base unit when the handset is not used. The battery cannot be overcharged.
- When the Clarity Booster feature is turned on automatically or manually, battery operating time may be shortened (p. 24).

Programmable Settings

Programming Guidelines **Handset**

The unit has several programmable functions which can be selected from the function menu on the display (p. 15).

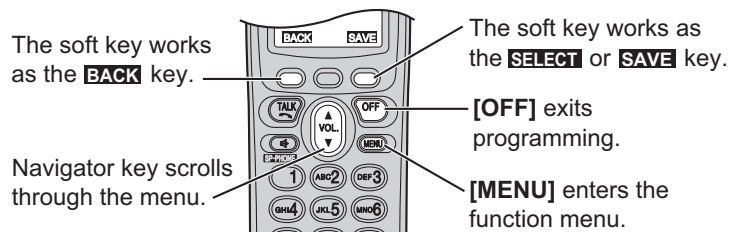


How to select a function item from the menu

Make sure the handset and base unit are not being used. The handset must be operated near the base unit and while off the base unit.

1 Press **[MENU]**.

- The main menu is displayed (p. 15).

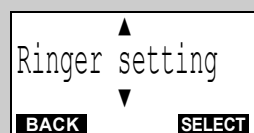

2 Scroll to the desired item by pressing **[▼]** or **[▲]**.

3 Press the soft key (**SELECT**) to select the desired item.

- ### 4
- If the item has a sub-menu, select the menu item (p. 15). Repeat steps 2 and 3 until the desired item is displayed. If the item has no sub-menu, go to step 5.

5 Select the desired setting by pressing **[▼]** or **[▲]**, then press the soft key (**SAVE**).

- A confirmation tone will be heard and the setting will be saved.



6 Press **[OFF]** to exit programming mode.

- To go back to the previous menu, press the soft key (**BACK**), or press the soft key (**SELECT**) while "--- (Go back) ---" is displayed. If you press this key in the main menu, the unit will exit programming mode.
- After programming is complete, the display will return to the main menu or the sub-menu depending on which menu the selected item is located. (See the menu table on page 15.)
- You can exit programming mode at any time by pressing **[OFF]**.
- If you do not press any buttons for 60 seconds, the unit will exit programming mode.
- If the unit detects a problem, an error message will be displayed (p. 65–67) and/or error beeps will sound.

Programmable Settings

Function Menu Table **Handset**

You can use the following functions to customize your unit. See the corresponding pages for function details.

- After pressing **[MENU]**, you can also program menu items directly by pressing **[0]** to **[9]**, **[*]** and **[#]** instead of using the soft keys (p. 61–62).

Main menu	Sub-menu I	Sub-menu II
→ Ringer setting	Ringer volume p. 16	
	Ringer tone p. 17	
	Incoming call. p. 54	
Voice enhancer p. 24		
Dial lock p. 55		
Copy phone book	Copy 1 item p. 39	
Talk Caller ID p. 29	Copy all items p. 40	
Initial setting	LCD contrast p. 19	
	Key tone p. 52	
	Auto talk p. 19	
	Room monitor p. 49	
	Set area code p. 20	
	Set tel line	Set dial mode p. 21
		Set recall time p. 53
		Set line mode p. 21
	Set base unit	Ringer tone p. 18
		Incoming call. p. 54
		Room monitor p. 49
		Talk Caller ID p. 29
	Registration	HS registration p. 64
		Deregistration p. 63

- If you program the dial lock, dialling mode, recall time or line mode using one of the handsets, you will not need to program the same item using another handset.

Programmable Settings

Ringer Volume

You can set the handset and base unit ringer volumes to high, medium, low, or off. The factory preset is HIGH. If the handset or base unit ringer is turned off, the handset or base unit will ring at the low level for intercom calls, and will not ring for outside calls. Caller names will not be announced even if the Talking Caller ID feature is turned on (p. 29).

Handset ringer volume **Handset**

1 Press [MENU].

2 Press the soft key (**SELECT**) at "Ringer setting".

Ringer setting


3 Press the soft key (**SELECT**) at "Ringer volume".

Ringer volume

4 Select the desired volume by pressing [▼] or [▲].

- The volume will change and ring.
- The number of steps indicates the volume level.
- **To turn the ringer off**, press [▼] repeatedly until "Off ?" is displayed.

Ex. High

Ringer volume
Low  High

Ex. Off

Ringer volume
Off ?

5 Press the soft key (**SAVE**).

- If the handset ringer is turned off, the handset displays "Ringer off" while not in use.
- You can also adjust the ringer volume while an outside call is ringing. Press [▼] or [▲] while the handset is ringing.

Temporary ringer off

While the handset is ringing for an outside call, you can turn the ringer off temporarily by pressing [OFF]. The handset will ring again as normal the next time a call is received.

Programmable Settings

Base unit ringer volume **Base Unit**

Make sure the base unit is not being used.

To set the ringer volume to high (preset), medium, or low, press [▼] or [▲].

- To increase volume, press [▲]. To decrease volume, press [▼].
- To stop ringing, press [0].

To turn the ringer off, press and hold [▼] until 2 beeps sound.

To turn the ringer on, press [▼] or [▲].

- The base unit will ring at the low level.
- You can adjust the ringer volume while an outside call is ringing. Press [▼] or [▲] while the base unit is ringing. To turn the ringer off, press and hold [▼] until 2 beeps sound.

Preparation

Ringer Tone

You can set the handset and base unit ringers to use one of 7 ringer patterns for outside calls. "Tone 1" to "Tone 3" are bell ringer patterns. "Melody 1" to "Melody 4" are melody patterns. The factory preset is "Tone 1".

- You cannot change the ringer tone for intercom calls.
- If you select one of the melody ringer patterns, the ringer will continue to sound for several seconds if:
 - the caller hangs up before you answer the call, or
 - another person answers the call using another phone connected on the same line.

Handset ringer tone **Handset**

1 Press [MENU].

2 Press the soft key (**SELECT**) at "Ringer setting".

Ringer setting

3 Scroll to "Ringer tone" by pressing [▼] or [▲], then press the soft key (**SELECT**).

Ringer tone

4 Select the desired ringer tone by pressing [▼] or [▲].

- The handset will ring and the ringer tone will change. If the ringer volume has been turned off, the handset will not ring (p. 16).
- You can also select the ringer tone by pressing [1] to [7].

Ringer tone
1:Tone 1

5 Press the soft key (**SAVE**), then press [OFF].

Programmable Settings

Base unit ringer tone (use either the handset or the base unit)

Base Unit

Make sure the base unit is not being used.

- 1 Press [**◀**] or [**▶**].
 - The base unit will ring using the current ringer tone. If the ringer volume has been turned off, the base unit will not ring (p. 17).
- 2 Press [**◀**] or [**▶**] repeatedly to select the desired tone.
 - Each time you press [**◀**] or [**▶**], another ringer tone will be heard and selected.
 - To stop ringing, press [**0**].
 - You can also select the ringer tone by pressing [**1**] to [**7**].
 - [**1**] to [**3**]: Bell ringer patterns
 - [**4**] to [**7**]: Melody patterns

Selecting the base unit ringer tone by using the Handset

- 1 Press [**MENU**].
- 2 Scroll to "Initial setting" by pressing [**▼**] or [**▲**], then press the soft key (**SELECT**).
- 3 Scroll to "Set base unit" by pressing [**▼**] or [**▲**], then press the soft key (**SELECT**).
- 4 Press the soft key (**SELECT**) at "Ringer tone".
- 5 Select the desired ringer tone by pressing [**▼**] or [**▲**].
 - When selecting the ringer tone, the base unit will ring. If the base unit ringer volume has been turned off, the base unit will not ring (p. 17).
 - You can also select the ringer tone by pressing [**1**] to [**7**].
 - [**1**] to [**3**]: Bell ringer patterns
 - [**4**] to [**7**]: Melody patterns
- 6 Press the soft key (**SAVE**), then press [**OFF**].

Initial setting

Set base unit

Ringer tone

Ringer tone
1:Tone 1

Programmable Settings

Auto Talk **Handset**

The Auto Talk feature allows you to answer calls by simply lifting the handset off the base unit (or the charger, for accessory handset users, p. 3). You do not need to press [↶] or [↷]. The factory preset is OFF.

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing [▼] or [▲], then press the soft key **(SELECT)**.

Initial setting

3 Scroll to "Auto talk" by pressing [▼] or [▲], then press the soft key **(SELECT)**.

Auto talk

4 Select "On" or "Off" by pressing [▼] or [▲].

Auto talk
:Off

5 Press the soft key **(SAVE)**, then press **[OFF]**.

- In order to view Caller ID information after you lift the handset to answer a call, leave the Auto Talk feature turned off.

Preparation

LCD Contrast **Handset**

There are 6 levels of LCD contrast. The factory preset is "level 3".

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing [▼] or [▲], then press the soft key **(SELECT)**.


Initial setting

3 Press the soft key **(SELECT)** at "LCD contrast".

LCD contrast

4 Select the desired contrast by pressing [▼] or [▲].

- The contrast will change.
- The number of steps indicates the contrast level.

Ex. Level 3
LCD contrast
Low  High

5 Press the soft key **(SAVE)**, then press **[OFF]**.

Programmable Settings

Storing Your Area Code **Handset**

We recommend you program your area code before using the Caller ID feature (p. 27). Incoming calls from the same area will be then recorded in the Caller List without the area code. You do not have to remove the code before calling back or storing.

To store your area code

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Initial setting

3 Scroll to "Set area code" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Set area code

4 Enter your area code of up to 8 digits.

- To delete a digit, press the soft key **(CLEAR)**.
To erase all of the digits, press and hold the soft key **(CLEAR)**.

Ex. Entered 02

Set area code
02

5 Press the soft key **(SAVE)**, then press **[OFF]**.

To erase your area code

Press the soft key **(CLEAR)** in step 4, press the soft key **(SAVE)**, and press **[OFF]**.

Programmable Settings

Line Mode **Handset**

The line mode is preset to "B" and generally should not be adjusted. If "IN USE" is not displayed on the handset properly, the line mode selection is incorrect. Set line mode to "A".

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Initial setting

3 Scroll to "Set tel line" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Set tel line

4 Scroll to "Set line mode" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Set line mode

5 Select "A" or "B" by pressing **[▼]** or **[▲]**.

Set line mode
:B

6 Press the soft key **(SAVE)**, then press **[OFF]**.

Preparation

Dialling Mode **Handset**

If the unit cannot make an outside call, the dialling mode may be incorrect. Set the dialling mode to "Tone".

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Initial setting

3 Scroll to "Set tel line" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Set tel line

4 Press the soft key **(SELECT)** at "Set dial mode".

Set dial mode

5 Select "Tone" by pressing **[▼]** or **[▲]**.

Set dial mode
:Tone

6 Press the soft key **(SAVE)**, then press **[OFF]**.

Making Calls

System capabilities (Operating more than one handset, p. 3)


Up to 3 extensions (3 handsets or 2 handsets and the base unit) can operate at a time. The maximum operating number may decrease depending on the state of use.

Using the Handset **Handset**

- 1 Press [**📞**].
 - "Talk" is displayed.
- 2 Dial a phone number.
 - The dialled number is displayed.
 - After a few seconds, the display will show the length of the call.
- 3 To hang up, press [**OFF**] or place the handset on the base unit.

To have a hands-free phone conversation

- 1 Press [**📞**].
 - "SP-phone" is displayed.
- 2 Dial a phone number.
 - The dialled number is displayed.
 - After a few seconds, the display will show the length of the call.
- 3 When the other party answers, talk into the microphone.
- 4 To hang up, press [**OFF**] or place the handset on the base unit.

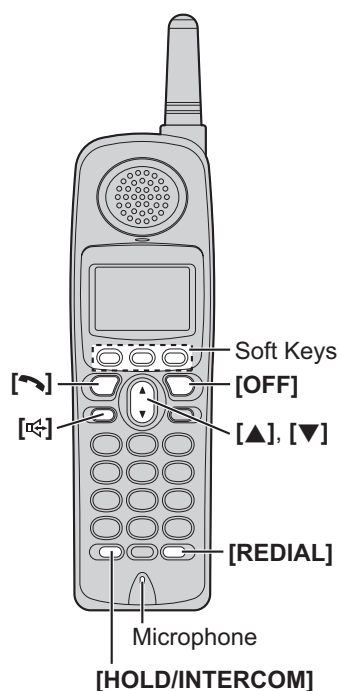

Hands-free Digital Duplex Speakerphone

For best performance, please note the following:

- Talk alternately with the other party in a quiet room.
- If you or the other party has difficulty hearing, press [**▼**] to decrease the speaker volume.
- While talking using [**📞**], you can switch to a hands-free phone conversation by pressing [**📞**]. To switch back to the receiver, press [**📞**].

Making Calls

To dial after confirming the entered number

1. Enter a phone number.

3334444

- If you misdial, press the soft key (**CLEAR**). Enter the correct phone number.
- If a pause is required when dialling, press the soft key (**PAUSE**) where needed (p. 51).
- To cancel, press **[OFF]**.

 
2. Press **[↶]** or **[↷]**.
3. To hang up, press **[OFF]** or place the handset on the base unit.

To adjust the receiver/speaker volume during a conversation

There are 3 volume levels for the receiver and 6 volume levels for the speaker.

To increase volume, press **[▲]**.
To decrease volume, press **[▼]**.

Ex. Receiver volume: High
Speaker volume: Level 6



- The display shows the current volume setting.
- If you try to increase/decrease volume when it is at the maximum/minimum level, the handset will beep 3 times.

To redial the last number dialled

Press **[↶]** or **[↷]**, then press **[REDIAL]**.

To redial using the redial list (Memory Redial)

The last 5 phone numbers dialled are stored in the redial list.

1. Press **[REDIAL]**.
 - The last number dialled is displayed.
2. Scroll to the desired number by pressing **[▼]** or **[▲]**.
 - You can also scroll down through the list by pressing **[REDIAL]**.
 - To exit the list, press **[OFF]**.

3. Press **[↶]** or **[↷]**.

- To erase an item, scroll to the item then press the soft key (**ERASE**).
- If "No items stored" is displayed, the list is empty.

To put a call on hold

1. Press **[HOLD/INTERCOM]** during a conversation.
 - "Press extension# to transfer" is displayed.
 - To transfer the call to the base unit or another handset, see page 45.
2. Press **[HOLD/INTERCOM]** again.
 - "Hold" is displayed.

To return to the call, press **[↶]** or **[↷]**.

- The base unit user can also take the call by pressing **[SP-PHONE]**.
- Another handset user can also take the call by pressing **[↶]** or **[↷]**.
- If another phone is connected on the same line (p. 11), you can also take the call by lifting its handset.
- If a call is kept on hold for 6 minutes, an alarm tone will start to sound and the Ringer indicator will start to flash rapidly. After 4 additional minutes on hold, the call will be disconnected.

Making Calls


Voice Enhancer Technology

Panasonic's Voice Enhancer Technology can simulate a band signal above the normal bandwidth limitations, achieving a sound which is close to the actual voice. You can turn this feature on or off, depending on the circumstance. The factory preset is OFF.

- Depending on the condition and quality of your telephone line, this feature may emphasize existing line noise. If it becomes difficult to hear, turn this feature off.

To turn this feature on, press the soft key **(VE)** during a conversation.

- "**VE**" is displayed.
- To turn this feature off**, press the soft key **(VE)** again. "**VE**" disappears from the display.

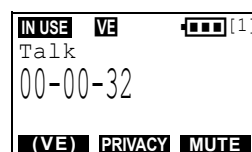

- After hanging up a call, the on/off setting will be retained.

 
When the handset is not in use, you can also turn this feature on or off by programming as follows:

- Press **[MENU]**.
- Scroll to "Voice enhancer" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.
- Select "On" or "Off" by pressing **[▼]** or **[▲]**.
- Press the soft key **(SAVE)**, then press **[OFF]**.

Clarity Booster

This feature can improve sound clarity when the handset is used in an area where there may be interference. During an outside call, this feature will be turned on automatically when necessary. This feature will turn off when you hang up, put a call on hold, or make a conference call. It will not turn off automatically during a call. You can also turn this feature on or off manually.

- Press **[MENU]** during an outside call.
- Press **[2]** to select "2=Booster on" or "2=Booster off".



- You can also select "2=Booster on" or "2=Booster off" by pressing **[▼]** then pressing the soft key **(SELECT)**.
- While this feature is turned on, "Booster on" will flash during a conversation.
- If this feature is turned off manually during a call, it will not be turned on automatically during the same call.
- When this feature is turned on automatically or manually, battery operating time may be shortened (p. 13).
- The maximum number of extensions which can be used at a time may decrease when using this feature.


Backlit LCD display/Lighted handset keypad

The handset display and dialling buttons will light for a few seconds after pressing a button or lifting the handset off the base unit (or the charger, for accessory handset users, p. 3). They will also light when an intercom/outside call is being received.

Making Calls

Using the Base Unit **Base Unit**

- 1** Press **[SP-PHONE]**.
 - The indicator lights.
- 2** Dial a phone number.
 - If you misdial, press **[SP-PHONE]** and start again from step 1.
- 3** When the other party answers, talk into the **MIC** (microphone).
- 4** To hang up, press **[SP-PHONE]**.
 - The indicator light goes out.

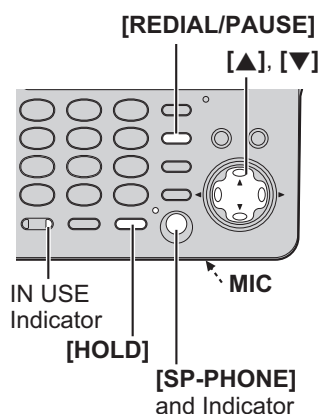

- To switch to the handset while using the base unit speakerphone:
 - If the handset is off the base unit, press **[📞]** or **[📞]** on the handset, then press **[SP-PHONE]** on the base unit.
 - If the handset is on the base unit, just lift up.

Hands-free Digital Duplex Speakerphone

For best performance, please note the following:

- Talk alternately with the other party in a quiet room.
- If you or the other party has difficulty hearing, press **[▼]** to decrease the speaker volume.

To adjust the speaker volume

To increase volume, press **[▲]**. To decrease volume, press **[▼]**.

- There are 8 volume levels. If you try to increase/decrease volume when it is at the maximum/minimum level, the base unit beeps 3 times.

To redial the last number dialled

Press **[SP-PHONE]**, then press **[REDIAL/PAUSE]**.

To put a call on hold

Press **[HOLD]** during a conversation.

- The SP-PHONE indicator and IN USE indicator flash.

To return to the call, press **[SP-PHONE]**.

- The handset users can also take the call by pressing **[📞]** or **[📞]**.
- If another phone is connected on the same line (p. 11), you can also take the call by lifting its handset.
- If a call is kept on hold for 6 minutes, an alarm tone will start to sound. After 4 additional minutes on hold the call will be disconnected.

Answering Calls

When a call is received, the unit rings, "Incoming call" is displayed, and the Ringer indicator on the handset and the IN USE indicator on the base unit flash rapidly.

Handset

- 1 Press [] or [].
 - You can also answer a call by pressing any button except [], [] or [OFF].
- 2 To hang up, press [OFF] or place the handset on the base unit.

Auto Talk

If the Auto Talk feature is turned on (p. 19), you can answer a call by simply lifting the handset off the base unit (or the charger, for accessory handset users, p. 3).


Temporary ringer off

While the handset is ringing for an outside call, you can turn the ringer off temporarily by pressing [OFF]. The handset will ring again as normal the next time a call is received.



Base Unit

- 1 Press [SP-PHONE].
- 2 Talk into the MIC.
- 3 To hang up, press [SP-PHONE].

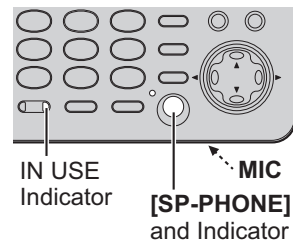

- To transfer the call to another extension, see page 45.
- If the ringer volume is turned off, the unit will not ring (p. 16, 17).

Caller ID Service

This unit is compatible with Caller ID services offered by your telephone company. If you subscribe to Caller ID, callers' information will be displayed and recorded in the Caller List.

How Caller ID information is displayed

When a call comes in, the unit will ring and the Caller ID information will be received. The handset display will show the caller's phone number after the ring.*

Example

0555222333

- After you answer the call, the display will show the length of the call.

*Private name display

If you receive a call from one of the phone numbers stored in the phone book, the handset will show the caller's name stored in the phone book.

The handset and base unit will announce the displayed name (Ex. "Call from TINA ROBINSON") following every ring (**Talking Caller ID feature**, p. 28).

Example

TINA ROBINSON
0555222333

- To use this function, names and phone numbers must be stored in the phone book (p. 34).
- If the handsets each have the same phone number stored with a different name, each handset will display the name stored in its own phone book.
- If the unit does not receive Caller ID information, one of the following will be displayed:

Display	Meaning
Out of area	The caller dialed from an area which does not provide Caller ID service.
Private caller	The caller requested not to send his/her information.

- Depending on radio communications with the base unit, the handset may not display Caller ID information immediately after the ring.
- If your unit is connected to a PBX which does not support Caller ID, you cannot access Caller ID services.
- If the name display service is available in your area, the display will show callers' names. For further information, please contact your telephone company.
- If you subscribe to Caller ID services, when a second call is received while talking, a call waiting tone will be heard and the second caller's information will be displayed (p. 52).

Contact Telstra or your service provider for details and availability in your area.

Caller ID Service

Talking Caller ID **Handset** **Base Unit**

To use this feature, you need to subscribe to Caller ID. For further information, please contact your telephone company.

The factory preset of the Talking Caller ID feature is ON (p. 29).

When a call is received, the unit will ring and receive Caller ID information.

Example

TINA ROBINSON
0555222333

If you receive a call from one of the phone numbers stored in the phone book or if the name display service is available in your area, the caller's name will be displayed and announced.

Announcing caller information (Talking Caller ID)

If the caller's phone number is stored in the phone book of the extension number 1 handset, all handsets and the base unit will announce the name stored in that phone book (Ex. "Call from TINA ROBINSON") following every ring.

- If the caller's phone number is not stored in the phone book of the extension number 1 handset, "Number available" is announced, indicating you should look at the display to see who is calling.
- Depending on your telephone company, the unit may announce "Number available" before announcing the caller's name stored in the phone book of the extension number 1 handset.
- The name announced by the Talking Caller ID feature will be different from the names displayed on the other extension handsets (2 to 4) if the name is stored differently in each phone book.
- If the unit does not receive Caller ID information, the unit will announce "Call from out of area" or "Call from private caller".
- If the ringer volume of the handsets and base unit is off, caller names will not be announced. The announcement is heard at the handset or base unit ringer volume (p. 16, 17).
- If this feature is turned off, caller names will not be announced (p. 29).
- If an outside call is received while on an intercom call between the handset and base unit, the other handset will ring, but the caller's name will not be announced.
- Name pronunciation may vary.
- The unit will announce each letter of abbreviations, such as "Co." and "Inc."
- Caller ID supports names of up to 15 letters. If the caller's name has more than 15 letters, the name will not be displayed or announced correctly.
- Your unit may mute one or more rings in order to announce the name of the caller. Talking Caller ID takes precedence over ringing.

Caller ID Service

To turn on or off Talking Caller ID feature

You can turn on or off Talking Caller ID feature for the handset and base unit separately. If this feature is turned off, the unit will not announce caller names. The factory preset is ON.

Handset Talking Caller ID feature **Handset**

1 Press **[MENU]**.

2 Scroll to "Talk Caller ID" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Talk Caller ID

3 Select "Off" or "On" by pressing **[▼]** or **[▲]**.

Talk Caller ID
:On

4 Press the soft key (**SAVE**), then press **[OFF]**.

Base unit Talking Caller ID feature **Handset**

This feature must be turned on or off for the base unit by using the handset.

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Initial setting

3 Scroll to "Set base unit" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Set base unit

4 Scroll to "Talk Caller ID" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Talk Caller ID

5 Select "Off" or "On" by pressing **[▼]** or **[▲]**.


Talk Caller ID
:On

6 Press the soft key (**SAVE**), then press **[OFF]**.

Using the Caller List

The unit can record information up to 50 different callers and store this information in the Caller List. Caller information is sorted by the most recent call to the oldest. When the 51st call is received, the information from the 1st call is deleted.

The unit will also tell you how many calls you missed while you were out or unavailable to answer the phone.

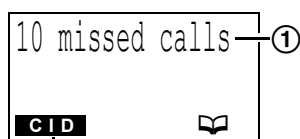

② Stands for Caller ID

① The handset display will show the number of calls you missed.

② Press the soft key (**CID**), [**▼**], or [**▲**] to review other calls logged in the Caller List.

- If there are no items in the Caller List, "**CID**" will not be displayed.
- After viewing the missed call entries, "missed calls" will disappear from the display.

Viewing the Caller List **Handset**

1 Press the soft key (**CID**), [**▼**], or [**▲**] to enter the Caller List.

Ex. 10 calls missed.

Caller list
10 missed calls
▼▲=Scroll list

2 To search from the most recent call, press [**▼**]. To search from the oldest call, press [**▲**].

- The caller's number and the time and date of the call are displayed.

Example

0555333444
3:10P 10JUN.

3 Press [**OFF**] to exit the list.

- Each handset has its own Caller List. If you viewed the Caller List or answered a call on one handset, the same information in the other handsets will be displayed as "missed".
- If you do not press any buttons for 60 seconds, the unit will exit the Caller List.

Using the Caller List

What “√” means

“√” indicates you have already viewed this calling information or answered the call. If the same caller calls again, the call entry with the “√” will be replaced with the new call entry.

0555333444
3:10P 10JUN. √

If a caller calls more than once

The number of times the same caller called is displayed (“×2” to “×9”). The date and time of the most recent call will be recorded. After viewing a caller's information, “×2” to “×9” will be replaced with “√”.

Ex. Called 3 times.

0555456789
11:20A 12JAN. ×3

Calling Back from the Caller List **Handset**

1 Press the soft key (**CID**), [▼], or [▲] to enter the Caller List.

2 Scroll to the desired caller by pressing [▼] or [▲].

3 Press [↶] or [↷].

- The phone number is dialled.

- In some cases, you may have to edit the number before dialling (p. 32).
- If a phone number is not displayed in the caller information, you cannot call that caller back from the Caller List.

Using the Caller List

Editing the Caller's Phone Number **Handset**

You can edit a phone number in the Caller List to call it back or store it in the phone book.

1 Press the soft key (**CID**), [**▼**], or [**▲**] to enter the Caller List.

2 Scroll to the desired caller by pressing [**▼**] or [**▲**].

0555321555
11:20A 12JAN.

3 Press the soft key (**EDIT**).

4 Add or erase digits to the beginning of the number as desired.

- To add a digit, enter a number.
- To erase a digit, press the soft key (**CLEAR**) or [**#**].

0555321555

5 To make a call to the edited number, press [**↶**] or [**↷**].
To store the edited number in the phone book, press the soft key (**SAVE**).

- If the phone number has no name information when it is stored, continue from (1) under step 3 of "Storing Caller Information in the Phone Book" on page 33.

- The number edited in step 4 will not be maintained in the Caller List.
- You cannot edit a phone number, if the dial lock is turned on (p. 55).

To quickly add or erase a digit at the beginning of a phone number in the Caller List

- Follow steps 1 and 2 above.
- Add or erase digits to the beginning of the number as desired.
 - To add a digit, enter a number.
 - To erase a digit, press [**#**].
- To make a call to the edited number, press [**↶**] or [**↷**].
To store the edited number in the phone book, press the soft key (**SAVE**).

Using the Caller List

Storing Caller Information in the Phone Book **Handset**

Caller phone numbers that are in the Caller List can be stored in the phone book.

- 1 Press the soft key (**CID**), [**▼**], or [**▲**] to enter the Caller List.
- 2 Scroll to the desired caller by pressing [**▼**] or [**▲**].
 - If the number requires editing, see page 32.
- 3 Press the soft key (**SAVE**).
 - If there is no name information for the caller, "Enter name" will be displayed.
 - You can enter a name by performing the following steps:
 - (1) enter the name (p. 35),
 - (2) press [**▼**], and
 - (3) press the soft key (**SAVE**).
 - If a name is not required, press [**▼**], then press the soft key (**SAVE**).
 - To continue storing other items, repeat from step 2.
 - To exit programming mode, press [**OFF**].

- You cannot store Caller List items in the phone book if a phone number is not displayed or the dial lock is turned on (p. 55).

Erasing Caller Information **Handset**

To erase a specific caller

- 1 Press the soft key (**CID**), [**▼**], or [**▲**] to enter the Caller List.
- 2 Scroll to the desired caller by pressing [**▼**] or [**▲**].
- 3 Press the soft key (**ERASE**).
 - "Erased" is displayed.
 - To erase other items, repeat from step 2.
 - To exit the Caller List, press [**OFF**].

To erase all entries

- 1 Press the soft key (**CID**), [**▼**], or [**▲**] to enter the Caller List.
 - Before erasing all entries, make sure that "0 missed call" is displayed.
- 2 Press the soft key (**ERASE**).
 - "All erase?" is displayed.
 - To cancel erasing, press the soft key (**NO**).
- 3 Press the soft key (**YES**).
 - "All erased" is displayed and all entries in your Caller List are erased.

Phone Book

The handset can store up to 50 names and phone numbers in its phone book. You can make a call by selecting a name or number from the phone book, and copy phone book items from one handset to another (p. 39, 40).

Storing Names and Numbers **Handset**

1 Press the soft key (☰).

- The display will show the number of stored items.

Phone book
10 items
0-9=Name search
▼▲=Scroll list

2 Press the soft key (**ADD**).

3 Enter a name of up to 16 characters with the dialling buttons ([0] to [9]) (p. 35), then press [▼].

- To move the cursor, press the soft key (◀) or (▶).
- If a name is not required, press [▼] then go to step 4.

Enter name
Tom
▼=Next

4 Enter a phone number of up to 32 digits.

- To delete a digit, press the soft key (**CLEAR**).
To erase all of the digits, press and hold the soft key (**CLEAR**).

Enter phone no.
0555654321
▼=Next

5 Press [▼].

- If you want to change the name, press the soft key (**EDIT**). The display returns to step 3. Change the name.
- If you want to change the number, press [▲]. The display returns to step 4. Change the number.

Tom
0555654321

6 Press the soft key (**SAVE**).

- To continue storing other items, repeat from step 2.

7 Press [OFF].

When the dial lock is turned on (p. 55), only numbers stored in the phone book as emergency numbers can be dialled.

To store an emergency number:

When storing a name in step 3, press [1] to enter # at the beginning of the name (p. 35).

Phone Book

- If a pause is required when dialling, press the soft key (**PAUSE**) in step 4. A pause is stored in a phone number as one digit (p. 51).
- To store numbers for calling card access (see "Chain Dial" on page 37), we recommend you add pauses after each item. Storing pauses with numbers will prevent misdialling (p. 51). The delay time necessary will depend on your telephone company.
- You cannot store a name and phone number in the phone book if the dial lock is turned on (p. 55).

Selecting characters to enter names

Enter names using the dialling buttons. Press each button until the desired character is displayed.

- Pressing each button selects a character in the order shown below.

Keys	Characters	Keys	Characters
[1]	# & ' () * , - . / 1	[6]	m n o M N O 6
[2]	a b c A B C 2	[7]	p q r s P Q R S 7
[3]	d e f D E F 3	[8]	t u v T U V 8
[4]	g h i G H I 4	[9]	w x y z W X Y Z 9
[5]	j k l J K L 5	[0]	0 Space
	Moves the cursor to the left.		
	Moves the cursor to the right. (To enter another character using the same number key, move the cursor to the next space.)		

For example, to enter "Tom":

1. Press **[8]** four times.
2. Press **[6]** three times, then press the soft key () to move the cursor.
3. Press **[6]** once.

T

To

Tom

Advanced Operation

If you make a mistake while entering a name or number

1. Press the soft key () or () to move the cursor to the incorrect character.
2. Press the soft key (**CLEAR**) to delete the character.
 - Each time you press the soft key (**CLEAR**), a character is erased.
 - To erase all characters, press and hold the soft key (**CLEAR**).
3. Enter the correct character.

Phone Book

Dialling from the Phone Book **Handset**

1 Press the soft key (☰).

- The display shows the number of stored items.
- You can press the soft key (**SEARCH**) to view the first item.

Phone book
10 items
0-9=Name search
▼▲=Scroll list

2 Scroll to the desired item. To scroll down, press [▼]. To scroll up, press [▲].

Phone book items are sorted in the following order:

1	Alphabet letters (Alphabetical)
2	Space & ' () , - . /
3	Numbers 0 to 9
4	# *
5	Telephone numbers (If no name is stored)

Frank
0555456789

3 Press [↶], [↷], or the soft key (**CALL**).

- The phone number is dialled.

- If "No items stored" is displayed in step 1, the phone book is empty.
- To exit the phone book, press **[OFF]**.

To search for a name by initial

1. Press the soft key (☰).

2. Press the dialling button for the first letter of the desired name until any name with the same initial is displayed (see the Index table below).

Ex. To find "Frank", press **[3]** repeatedly until the first item under "F" is displayed.

- If there are no items beginning with the character you selected, the first item in the next alphabetical index will be displayed.

3. Press [▼] repeatedly until the desired name is displayed.

Index table

Keys	Index	Keys	Index
[1]	Symbols, 1	[6]	M, N, O, 6
[2]	A, B, C, 2	[7]	P, Q, R, S, 7
[3]	D, E, F, 3	[8]	T, U, V, 8
[4]	G, H, I, 4	[9]	W, X, Y, Z, 9
[5]	J, K, L, 5	[0]	0, Space

Phone Book

Chain Dial **Handset**

You can dial a combination of phone book or manual key pad entries while making a call. This feature can be used, for example, to first automatically dial a calling card access number that you have stored in the phone book, then manually or automatically dial your PIN and then automatically dial the destination number from the phone book.

Ex. Using a long distance calling card

- To prevent misdialling, we recommend you add pauses where needed when storing numbers. For example, add pauses after a calling card access number and your PIN when storing in the phone book (p. 34).

1. Search and dial from the phone book: 18000123456 (Calling card access number)
 - The voice guidance may be announced.
2. Search and dial from the phone book: 1234 (Calling card PIN)
3. Search and dial from the phone book: 15550123456 (Destination Number)

- 1 While you are on a call;**
Press **[MENU]**.

1=Phone book
2=Booster on

- 2 Press the soft key (**SELECT**) at "1=Phone book", or press **[1]**.**

Phone book
30 items
0-9=Name search
▼▲=Scroll list

- 3 Search for the desired item by pressing **[▼]** or **[▲]**.**
 - To search for an item by initial, see page 36.

Alan
15550123456

- 4 Press the soft key (**CALL**).**
 - The phone number is dialled.
 - If required, repeat steps 1 to 4 for any remaining numbers.

Advanced Operation

Phone Book

Editing an Item in the Phone Book **Handset**

1 Press the soft key (📖).

2 Scroll to the desired item by pressing [▼] or [▲].

- To search for the item by initial, see page 36.

Jane
5456789

3 Press the soft key (**EDIT**).

Enter name
Jane
▼=Next

4 Edit the name (p. 35), then press [▼].

- If you do not need to change the name, press [▼] then go to step 5.
- To move the cursor, press the soft key (◀) or (▶).

Enter name
Jane Walker
▼=Next

5 Edit the phone number, then press [▼].

- If you do not need to change the number, press [▼] then go to step 6.
- To delete a digit, press the soft key (**CLEAR**).
To delete all of the digits, press and hold the soft key (**CLEAR**).

Enter phone no.
0555456789
▼=Next

6 Press the soft key (**SAVE**).

- To continue editing other items, repeat from step 2.

7 Press **[OFF]**.

- You cannot edit an item, if the dial lock is turned on (p. 55).

Erasing an Item in the Phone Book **Handset**

1 Press the soft key (📖).

2 Scroll to the desired item by pressing [▼] or [▲].

- To search for the item by initial, see page 36.

3 Press the soft key (**ERASE**).

- To cancel erasing, press the soft key (**NO**).

Erase?

4 Press the soft key (**YES**).

- To erase other items, repeat from step 2.

Erased

5 Press **[OFF]**.

- You cannot erase an item, if the dial lock is turned on (p. 55).

Phone Book

Copying Items in the Phone Book **Handset** (When the System Has Two or More Handsets)

You can copy one or all phone book items between two handsets. The destination handset will save the items in its phone book.

- If an outside call is received during the phone book copy, copying will stop. You will need to re-send the item(s) later.
- After the copy has started, do not place your handset on the base unit (or the charger, for accessory handset users, p. 3) until copying finishes, otherwise copying will stop.

To copy one phone book item to another handset

Make sure the destination handset is not in use.

1 Press **[MENU]**.

2 Scroll to "Copy phone book" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Copy phone book

3 Press the soft key (**SELECT**) at "Copy 1 item".

Copy 1 item

4 Select the destination extension number (1 to 4) by pressing **[▼]** or **[▲]**.

- You can also select the extension number by pressing **[1]** to **[4]**.

Enter extension#
:2
▼▲

5 Press the soft key (**NEXT**).

Select item

6 Scroll to the desired phone book item by pressing **[▼]** or **[▲]**.

- To search for the item by initial, see page 36.

7 Press the soft key (**SEND**).

- To continue copying other items, repeat from step 6.

Complete

8 Press **[OFF]**.

Advanced Operation

Phone Book

To copy all of the items in your phone book to another handset

Make sure the destination handset is not in use.

1 Press **[MENU]**.

2 Scroll to "Copy phone book" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Copy phone book

3 Scroll to "Copy all items" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Copy all items

4 Select the destination extension number (1 to 4) by pressing **[▼]** or **[▲]**.

- You can also select the extension number by pressing **[1]** to **[4]**.

Enter extension#
:2
▼▲

5 Press the soft key **(SEND)**.

- When all items have been copied, "Complete" is displayed.
- The destination handset displays "Phone book Receiving" then "Phone book Received".
- To continue copying items to another extension, repeat from step 3.

Ex. Copying 1st item out of 10 items

Tom Jones
0555666777
01/10

6 Press **[OFF]**.

- You can exit phone book copying mode by pressing **[OFF]**.


Speed Dialler

Storing Phone Numbers **Base Unit**

You can store up to 10 phone numbers in the base unit. The dialling buttons ([0] to [9]) function as memory stations.

Make sure the base unit is not being used.

- 1 Press [PROGRAM].**
 - The IN USE indicator flashes.
- 2 Enter a phone number of up to 32 digits.**
 - If you misdial, press [PROGRAM], and start again from step 1.
- 3 Press [AUTO].**
- 4 Press a memory station number ([0] to [9]).**
 - A long beep sounds and the phone number is saved.
 - To store other numbers, repeat from step 1.

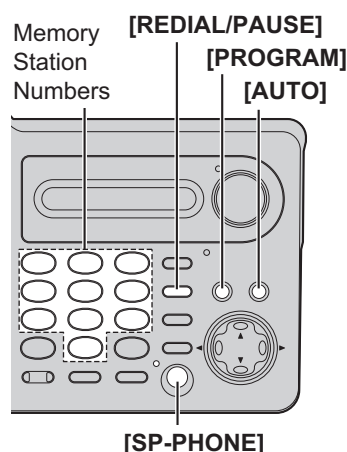

- If a pause is required when dialling, press [REDIAL/PAUSE] where needed. A pause counts as one digit (p. 51).
- If a phone number is stored in a memory location which already contains a phone number, the old number will be erased.
- We recommend you make a note of which phone numbers are stored in which memory locations.
- You cannot store or erase phone numbers in the base unit, if the dial lock is turned on (p. 55).

To erase a stored number

1. Press [PROGRAM], then press [AUTO].
2. Press the memory station number ([0] to [9]) for the phone number to be erased.
 - A long beep sounds and the phone number is erased.

Dialling a Stored Phone Number **Base Unit**

- 1 Press [SP-PHONE].**
- 2 Press [AUTO].**
- 3 Press a memory station number ([0] to [9]).**
 - The stored number is dialled.

- Speed dial numbers stored in the base unit can only be dialled from the base unit.
- You cannot dial stored phone numbers, if the dial lock is turned on (p. 55).

Intercom

Intercom calls can be made between a handset and the base unit, and between two handsets (when the system has two or more handsets, p. 3). You can page all handsets at once from the base unit, and announce the page to all handsets (**Voice Paging**, p. 44).

Page the desired unit(s) by entering the extension number, shown in the top right of each handset's display. The base unit's extension number is 0.

Making Intercom Calls

From **Handset**

1 Press **[HOLD/INTERCOM]**.

Press extension#
to call
1-4=Handset
0=Base

2 To page the base unit, press **[0]**.
To page another handset, press its extension number (**[1]** to **[4]**).

- The paged unit will ring for 1 minute.
- To stop paging, press **[OFF]**.

Ex. Calling Base unit

Calling Base

Ex. Calling Handset 2

Calling HS[2]

3 When the paged party answers, start talking.

- You can switch to the speaker by pressing **[🔊]**.
To switch back to the receiver, press **[🔇]**.

Ex. Intercom between
Handset 1 & Base unit

Intercom
00-00-05
■01

4 To disconnect the intercom, press **[OFF]**.

From **Base Unit**

Using this feature, you can also locate a misplaced handset.

1 Press **[LOCATOR/INTERCOM/TRANSFER]**.

- The LOCATOR/INTERCOM/TRANSFER and SP-PHONE indicators light.

2 To page all handsets, press **[0]**.

To page a specified handset, press its extension number **[1]** (**/**) to **[4]** (**/**).

- The handset(s) will ring for 1 minute.
- To stop paging, press **[SP-PHONE]** or **[LOCATOR/INTERCOM/TRANSFER]**.

3 When the paged party answers, talk into the **MIC**.

4 To disconnect the intercom, press **[SP-PHONE]** or **[LOCATOR/INTERCOM/TRANSFER]**.

- The indicator lights go out.

Intercom

During an intercom call:

- If you have difficulty hearing while using the speakerphone on the handset or base unit, decrease the speaker volume by pressing [▼].
- If an incoming call is being received, you will hear two tones (incoming call tone, p. 54) and the IN USE indicator on the base unit will flash rapidly.
To answer the call;
— if using the handset, press [OFF], then press [↶] or [↷].
— if using the base unit, press [SP-PHONE] twice.

Answering Intercom Calls

Handset

When a handset is paged, it rings and the Ringer indicator flashes rapidly. The display shows the calling extension.

1 Press [↶], [↷] or [HOLD/INTERCOM].

- You can also answer a page by pressing any button except [▼], [▲] or [OFF].

Ex. Base calling

Call from Base

Ex. Handset 2 calling

Call from HS[2]

2 To disconnect the intercom, press [OFF].

- If the Auto Talk feature is turned on (p. 19), you can also answer a page by simply lifting the handset off the base unit (or the charger, for accessory handset users, p. 3).

Base Unit

When the base unit is being paged, it rings and the LOCATOR/INTERCOM/TRANSFER indicator flashes.

1 Press [SP-PHONE] or [LOCATOR/INTERCOM/TRANSFER].

2 To disconnect the intercom, press [SP-PHONE] or [LOCATOR/INTERCOM/TRANSFER].

- When the ringer volume is turned off (p. 16, 17), the handset and the base unit will ring at the low level for intercom calls.
- You cannot change the ringer tone for intercom calls.
- When the base unit user pages all handsets, only the handset user who answers first can talk with the base unit user.

Intercom

Voice Paging **Base Unit**

The base unit user can make a voice announcement that is heard through the speakers of all handsets.

- When 4 handsets are registered to the base unit, and if one handset user is on conversation using the Booster feature, 1 of the remaining 3 handsets will not receive the voice announcement.

1 Press **[LOCATOR/INTERCOM/TRANSFER]**.

- The LOCATOR/INTERCOM/TRANSFER and SP-PHONE indicators light.

2 To make a voice announcement to all handsets, press **[5] ()**.

- You will hear a ringback tone (two short beeps) and the SP-PHONE indicator flashes.

3 When the SP-PHONE indicator stops flashing, speak into the **MIC**.

- All handset users will hear your voice through their speakers after beeps, "Call from Base" will be displayed and the Ringer indicator will flash rapidly on the handsets.
- The handset on the base unit will not be paged.

4 When finished, press **[SP-PHONE]** or **[LOCATOR/INTERCOM/TRANSFER]**.

OR

After one of the handsets answers, talk into the **MIC**.

To disconnect the intercom, press **[SP-PHONE]** or **[LOCATOR/INTERCOM/TRANSFER]**.

- Only the handset user who answers first can talk with the base unit user.
- To answer the page from the handsets, see "Answering Intercom Calls" on page 43.
- If a handset is too close to the base unit, you may hear feedback while making the voice announcement. Place the handset on the base unit (or the charger, for accessory handset users, p. 3) or press **[OFF]**.
- It is not possible to specify which handset(s) will hear the voice announcement.
- The announcement is heard at the handset ringer volume (p. 16).

Transferring a Call

You can transfer an outside call to the base unit or a handset.

From the **Handset** to the **Base Unit**

1 Handset:

(1) During a call, press **[HOLD/INTERCOM]**.

- The call is put on hold.

(2) To page the base unit, press **[0]**.

(3) Wait for the paged party to answer, then you can announce the transfer.

- If the paged party does not answer, press **[↶]** or **[↷]** to return to the outside call.

Press extension#
to transfer
1-4=Handset
0=Base

2 Base unit: Press **[SP-PHONE]** or **[LOCATOR/INTERCOM/TRANSFER]** to answer the page.

3 Handset: To complete the transfer, press **[OFF]**.

From the **Base Unit** to the **Handset**

1 Base unit:

(1) During a call, press **[LOCATOR/INTERCOM/TRANSFER]**.

- The call is put on hold.

(2) To page a specified handset, press its extension number **[1]** (**1**) to **[4]** (**4**).

To page all handsets, press **[0]**.

Wait for the handset user to answer, then you can announce the transfer.

OR

To make a voice announcement to all handsets, press **[5]** (**5**), then speak into the **MIC** when the SP-PHONE indicator stops flashing.

- If the paged party does not answer, press **[LOCATOR/INTERCOM/TRANSFER]** to return to the outside call.

2 Handset: Press **[↶]**, **[↷]**, or **[HOLD/INTERCOM]** to answer the page.

- You can also answer a page by pressing any button except **[▼]**, **[▲]** or **[OFF]**.

3 Base unit: To complete the transfer, press **[SP-PHONE]**.

- When the base unit user calls all handsets, only the handset user who answers first can take the transferred call.

Transferring a Call

From a **Handset** to another **Handset**

(when the system has two or more handsets)

- 1 During a call, press **[HOLD/INTERCOM]**, then page another handset by pressing its extension number (**[1]** to **[4]**).
- 2 Wait for the paged party to answer, then you can announce the transfer.
 - The paged handset user can answer by pressing **[↶]**, **[↷]**, or **[HOLD/INTERCOM]**. (Any button except **[▼]**, **[▲]** or **[OFF]** can be pressed to answer the page.)
 - If the paged party does not answer, press **[↶]** or **[↷]** to return to the outside call.
- 3 To complete the transfer, press **[OFF]**.
 - If the Auto Talk feature is turned on (p. 19), the paged handset user can also answer a page by simply lifting the handset off the base unit (or the charger, for accessory handset users, p. 3).
 - Any user can answer a transferred call by pressing **[↶]**, **[↷]**, or **[SP-PHONE]**.
 - If you call an extension from the handset in step 1, and the extension is in use, the display will show "Busy" then "Hold".

Press **[↶]** or **[↷]** to return to the outside call. To transfer the call to another extension, repeat from step 1.

Transferring a Call

Quick call transfer

You can transfer a call without waiting for the paged party to answer.

Handset

1. During a call, press **[HOLD/INTERCOM]**.
2. Press the extension number (**[0]** for the base unit, **[1]** to **[4]** for the handset).
3. Press **[OFF]** to hang up.

Base Unit

1. During a call, press **[LOCATOR/INTERCOM/TRANSFER]**.
2. Press the extension number **[1]** (/) to **[4]** (/), or press **[0]** to page all handsets.
3. Press **[SP-PHONE]** to hang up.
 - The call will be transferred directly.
 - The paged party can answer the transferred call by pressing **[↶]**, **[↷]**, or **[SP-PHONE]**.
 - After the paged party answers, the transfer is complete.
 - If the paged party does not answer:
 - for the handset, press **[↶]** or **[↷]** to return to the outside call.
 - for the base unit, press **[SP-PHONE]** to return to the outside call.
 - If the paged party does not answer within 60 seconds after you hang up, your phone will ring and the call will be returned to your phone. You may speak to the caller again by pressing **[↶]**, **[↷]**, or **[SP-PHONE]**.
 - If you do not answer the call within 4 minutes, the call will be disconnected.

Advanced Operation

Conference Calls

While you are talking with an outside caller, the base unit user or a handset user can join the conversation and establish a conference call.

Handset

- 1** During a call, press **[HOLD/INTERCOM]**.
 - The call is put on hold.
- 2** To page the base unit, press **[0]**.
To page another handset, press the extension number (**[1]** to **[4]**).
- 3** When the paged party answers, press the soft key (**CONF**) on your unit to make a conference call.

Base Unit

- 1** During a call, press **[LOCATOR/INTERCOM/TRANSFER]**.
 - The call is put on hold.
- 2** To page a handset, press the extension number **[1] (/)** to **[4] (/)**.
- 3** When the paged party answers, press **[CONF]** on your unit to make a conference call.

- To leave the conference, press **[OFF]** on the handset or press **[SP-PHONE]** on the base unit. The two other parties can continue the conversation.
- During a conference, the outside call can be placed on hold by pressing **[HOLD/INTERCOM]** on the handset or **[HOLD]** on the base unit.
Internal communications between extensions are not suspended. Only the person who placed the call on hold can resume the full conference by pressing the soft key (**CONF**) on the handset or **[CONF]** on the base unit.
- One more extension can join the conference call. To join the conference call, press **[↶]**, **[↷]**, or **[SP-PHONE]**. A maximum of four parties including the outside party can take part in a conference call.

Call Share

This feature allows the base unit or the handset to join an existing outside call.

- To prevent other users from joining your conversation, turn the Call Privacy feature on (p. 51).

To join a conversation (Call Share)

Handset Press **[↶]** or **[↷]**.

- "Conference" is displayed.

Base Unit Press **[SP-PHONE]**.

- A maximum of four parties including the outside party can join a conversation.

Room Monitor

This feature allows you to monitor a room by using the intercom feature. For example, you can monitor a baby from different areas of the house. You can call the destination unit to monitor the room. The called unit will not ring. When the system has two or more handsets (p. 3), you can monitor one handset using another. To allow other users to monitor through your unit, turn this feature on. If you want to prevent your unit from being monitored by other extensions, leave this feature off. Using the handset, this feature can be turned on or off separately for the handset and base unit. The factory preset is OFF.

To turn Room Monitor on for the handset **Handset** (to allow other users to monitor through your handset)

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Initial setting

3 Scroll to "Room monitor" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Room monitor

4 Select "On" by pressing **[▼]** or **[▲]**.

Room monitor
:On

5 Press the soft key **(SAVE)**, then press **[OFF]**.

- To prevent your handset from being monitored, select "Off" in step 4.

To turn Room Monitor on for the base unit **Handset** (to allow other users to monitor through your base unit)

1 Follow steps 1 and 2 of "To turn Room Monitor on for the handset" above.

2 Scroll to "Set base unit" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Set base unit

3 Scroll to "Room monitor" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Room monitor

4 Select "On" by pressing **[▼]** or **[▲]**.

Room monitor
:On

5 Press the soft key **(SAVE)**, then press **[OFF]**.

- To prevent your base unit from being monitored, select "Off" in step 4.

Room Monitor

To monitor with **Handset**

The unit to be monitored must not be in use and the handset to be monitored must be off the base unit.

1 Press **[HOLD/INTERCOM]**, then press the soft key **(MONITOR)**.

2 To call the base unit, press **[0]**.
To call another handset, press its extension number (**[1]** to **[4]**).

- To monitor from the speaker, press **[🔊]**. If the handset is placed on the base unit, monitoring will be stopped. Accessory handset users (p. 3) can place the handset on the charger and continue monitoring. To switch back to the receiver, press **[🔊]**.

Press extension#
for room monitor
1-4=Handset
0=Base

Room monitor
00-00-05
■01

3 To end monitoring, press **[OFF]**.

- The monitored user can stop being monitored by:
 - on the handset, press **[OFF]** or place the handset on the base unit.
 - on the base unit, press **[LOCATOR/INTERCOM/TRANSFER]** or **[SP-PHONE]**.
- “Room monitor” is also displayed on the monitored handset.
- While the base unit is monitoring or being monitored, the LOCATOR/INTERCOM/TRANSFER indicator flashes and the SP-PHONE indicator lights.

To monitor with **Base Unit**

The handset to be monitored must not be in use and off the base unit.

1 Press **[LOCATOR/INTERCOM/TRANSFER]**, then press **[MUTE]**.

- The LOCATOR/INTERCOM/TRANSFER indicator flashes.

2 To call the handset, press its extension number **[1]** (**/**) to **[4]** (**/**).

3 To end monitoring, press **[LOCATOR/INTERCOM/TRANSFER]** or **[SP-PHONE]**.

- The indicator light goes out.

- If the Room Monitor feature of the destination handset is off or the handset is on the base unit, busy tones will sound.

Special Features

Muting Your Conversation

During a call, you can mute your phone so the other party cannot listen to you. When muting your conversation, you can hear the other party.

Handset Press the soft key (**MUTE**).

- “Mute” will be displayed for a few seconds and “**MUTE**” will flash.
- **To release the mute**, press the soft key (**MUTE**) again.
- If you press [**↶**] or [**↷**] to switch between the receiver and speaker, the mute will be released.

Base Unit Press [**MUTE**].

- The SP-PHONE indicator flashes.
- **To release the mute**, press [**MUTE**] again.

Call Privacy **Handset**

Call Privacy allows you to prevent other users from joining your conversation with an outside caller. To allow other users to join your conversation, leave this feature off. This feature is only available for the handset.

To turn on the Call Privacy feature:

Press the soft key (**PRIVACY**) during a conversation.

- “PRIVACY” will be displayed.
- To turn this feature off, press the soft key (**PRIVACY**) again during a conversation.
- While the Call Privacy feature is turned on, other users cannot join the conversation.
- Call Privacy will turn off after you hang up the call.

Using the PAUSE Button (For PBX Line/Long Distance Calls)

Handset Base Unit

We recommend you press the soft key (**PAUSE**) on the handset or press [**REDIAL/PAUSE**] on the base unit if a pause is required for dialling with a PBX or to make a long distance call.

- “**PAUSE**” is displayed on the handset only when dialling before pressing [**↶**] or [**↷**] (p. 23), or storing numbers in the phone book (p. 34).

Ex. Line access number [**9**] (PBX)

[**9**] ➔ Soft key (**PAUSE**) or [**REDIAL/PAUSE**] ➔ Phone number

- Pressing the soft key (**PAUSE**) on the handset or [**REDIAL/PAUSE**] on the base unit once creates a 3.5 second pause. This prevents misdialling when you dial after confirming the entered number (p. 23) or dial a stored number (p. 36, 37, 41).
- Pressing the soft key (**PAUSE**) on the handset or [**REDIAL/PAUSE**] on the base unit more than once increases the length of the pause between numbers.

Special Features

Call Waiting and Caller ID Compatible **Handset**

If you subscribe to Caller ID services, your handset displays a second caller's information while talking. After you hear a call-waiting tone, the caller's phone number and "Waiting" will be displayed.

0555666777
----Waiting----

You can answer the second call, keeping the first call on hold.

Follow Telstra or your service provider instructions using **[RECALL/CALL WAIT]**.

- If the phone number is stored in the phone book, the caller's name will be displayed (p. 27).
- Please contact Telstra or your service provider for details and availability in your area.

Using Caller ID Type II

When you receive a second call during a conversation, you will hear a signal tone following the call waiting tone and the **conversation will be interrupted or muted for a short period of time**. This is not fault of the product as these events are normal.

Note: The tones are generated by the telephone company.

Key Tone **Handset**

You can select whether or not the handset keys will sound tones (key tone, confirmation tone, error tone). The factory preset is ON.

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Initial setting

3 Scroll to "Key tone" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Key tone

4 Select "Off" or "On" by pressing **[▼]** or **[▲]**.

Key tone
:On

5 Press the soft key **(SAVE)**, then press **[OFF]**.

Special Features

RECALL Button **Handset** **Base Unit**

Pressing **[RECALL/CALL WAIT]** allows you to use special features of your host PBX such as transferring an extension call, or accessing optional telephone services such as call waiting.

- Pressing **[RECALL/CALL WAIT]** cancels the mute (p. 51).

Selecting the recall time **Handset**

The recall time depends on your telephone exchange or host PBX.

You can select the following recall times: "700, 600, 400, 300, 250, 110, 100 or 90 ms (milliseconds)". The factory preset is "100 ms".

- If PBX functions do not work correctly, consult your PBX supplier for the correct settings.

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Initial setting

3 Scroll to "Set tel line" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Set tel line

4 Scroll to "Set recall time" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Set recall time

5 Select the recall time by pressing **[▼]** or **[▲]**.

Set recall time
:100ms

6 Press the soft key **(SAVE)**, then press **[OFF]**.

- You can access Telstra's "EASY CALL" service by having the recall time set at 100 ms (this is the factory default setting), and then follow Telstra's "EASY CALL" instructions to operate this service.

Advanced Operation

Special Features

Incoming Call Tone **Handset** **Base Unit**

During an intercom call (p. 42) or while using the Room Monitor feature, you can be informed of incoming calls by two tones.

If this feature is turned on, incoming call tones will be heard for as long as the line is ringing. If this feature is set to "2", incoming call tones will be heard only 2 times. If this feature is turned off, no tones will be heard. This factory preset is "2".

Using the handset, this feature can be set separately for the handset and base unit.

Handset incoming call tone **Handset**

1 Press **[MENU]**.

2 Press the soft key (**SELECT**) at "Ringer setting".

Ringer setting

3 Scroll to "Incoming call." by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Incoming call.

4 Select "On", "Off" or "2" by pressing **[▼]** or **[▲]**.

Incoming call
tone :2

5 Press the soft key (**SAVE**), then press **[OFF]**.

Base unit incoming call tone **Handset**

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Initial setting

3 Scroll to "Set base unit" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Set base unit

4 Scroll to "Incoming call." by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Incoming call.

5 Select "On", "Off" or "2" by pressing **[▼]** or **[▲]**.

Incoming call
tone :2

6 Press the soft key (**SAVE**), then press **[OFF]**.

Special Features

Dial Lock **Handset** **Base Unit**

The dial lock feature allows you to prevent others from making calls with the handset(s) and base unit. You can turn on the dial lock for all the units using a handset or the base unit. To use this feature, turn the feature on. The factory preset is OFF.

When the dial lock is turned on, only numbers stored in the phone book as emergency numbers (numbers stored with a # at the beginning of the name) can be dialled (p. 34). We recommend storing emergency numbers in the phone book before using this feature.

To turn the dial lock on (use either the handset or the base unit)

Handset

1 Press **[MENU]**.

2 Scroll to "Dial lock" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Dial lock

3 Enter a 4-digit password.

- This password is required when turning the dial lock off.
- If more than 4 digits are entered, the last 4 digits are the password.

Enter password
: _____

4 Press the soft key (**SAVE**).

Enter password
:1234

5 Press the soft key (**YES**).

- "Dial lock on" is displayed.

Turn Dial lock
on?

6 Press **[OFF]**.

Base Unit

1 Press **[DIAL LOCK]**.

- The DIAL LOCK indicator flashes.

2 Enter a 4-digit password.

- If more than 4 digits are entered, the last 4 digits are the password.

3 Press **[#]**.

4 Enter the password again.

5 Press **[DIAL LOCK]**.

- A long beep sounds and the indicator lights.
- If the base unit beeps 3 times, the wrong password was entered in step 4. Start again from step 1.

Special Features

- If the dial lock is turned on, the handset displays "Dial lock", and the DIAL LOCK indicator on the base unit lights. While there are missed calls, "Dial lock" is not displayed.
- If you make a call while the dial lock is turned on:
 - using the handset, the handset beeps 3 times and "Dial locked" is displayed.
 - using the base unit, the base unit beeps 3 times.
- Please write down your password. If you forget your password, consult your nearest Panasonic service centre.

To turn the dial lock off (use either the handset or the base unit)

Handset

1 Press [MENU].

2 Scroll to "Dial lock" by pressing [▼] or [▲], then press the soft key (SELECT).

Dial lock

3 Enter the password set when the dial lock was turned on.

Enter password
: ____

4 Press the soft key (SAVE).

Enter password
: ****

5 Press the soft key (YES).

- "Dial lock off" is displayed.
- If you entered the wrong password, the handset beeps 3 times and "Save error" is displayed. Enter the correct password.

Turn Dial lock
off?

6 Press [OFF].

Base Unit

1 Press [DIAL LOCK].

- The DIAL LOCK indicator flashes.

2 Enter the password set when the dial lock was turned on.


3 Press [DIAL LOCK].

- A long beep sounds and the indicator light goes out.
- If you entered the wrong password, the base unit beeps 3 times. Start again from step 1.

Belt Clip


You can hang the handset on your belt or pocket using the included belt clip.

To attach the belt clip

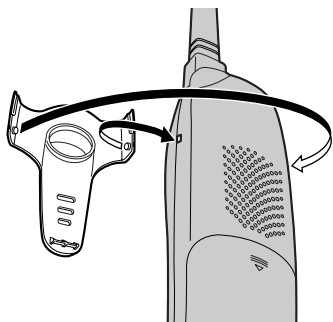

To remove the belt clip

While pressing the top of the clip (A), pull the right edge in the direction of the arrow (B).

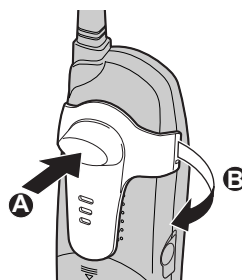


Optional Headset

Connecting an optional headset to the handset allows hands-free phone conversation. Please use only the Panasonic KX-TCA88AL headset.

Only telecommunications compliance labelled headsets should be plugged into the headset jack on the handset.

Connecting the optional headset

Open the headset jack cover, and insert the headset plug into the headset jack as shown below.

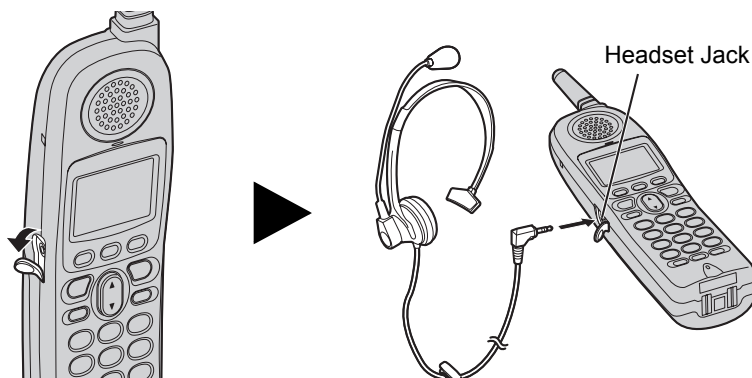


To switch to the speakerphone while using the headset:
Press [M]. To return to the headset, press [M].

Useful Information


Wall Mounting

This unit can be mounted on a wall.


- 1** Connect the AC adaptor.

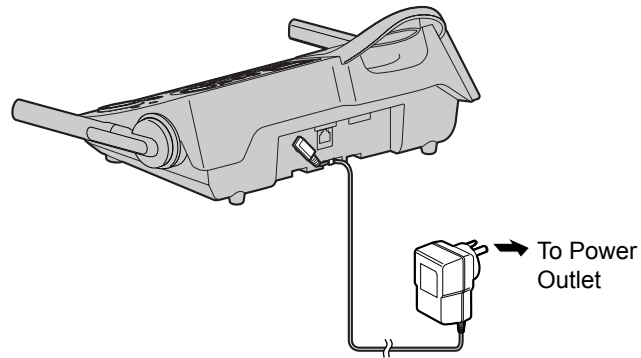

- 2** Tuck the telephone line cord inside the wall mounting adaptor **(1)**.
Connect the telephone line cord **(2)**.

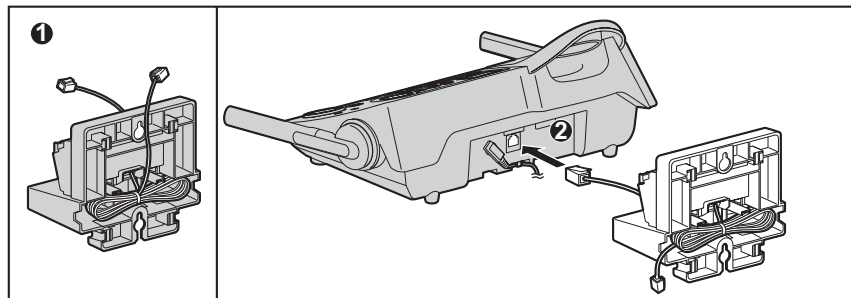


- 3** Insert the hooks on the wall mounting adaptor into the holes **(A)** and **(B)** on the base unit.

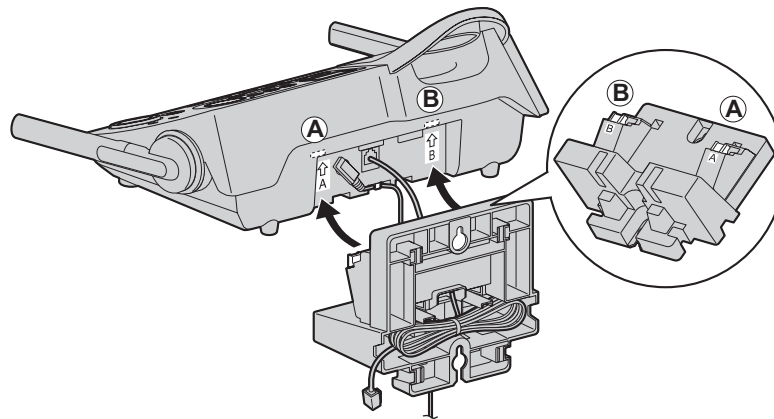


Wall Mounting

- 4** Adjust the adaptor to hold the base unit, then push it in the direction of the arrow until it clicks into place.

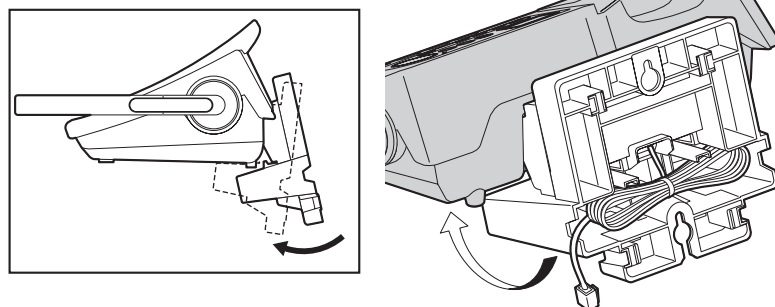

- 5** Install screws using the wall template below. Connect the telephone line cord. Mount the unit, then slide down.

- Raise the antennas.

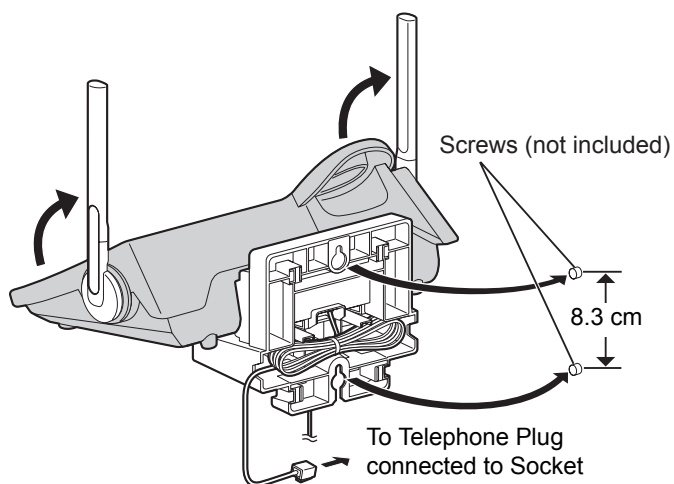


- 6 To charge the handset battery:**

Place the handset on the base unit.

- The unit beeps once and the CHARGE indicator lights.


Wall Template

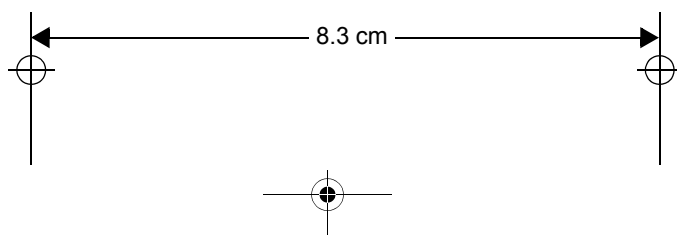

Wall Mounting

To remove the wall mounting adaptor

While pushing down the RELEASE LEVERS (❶), remove the adaptor (❷).

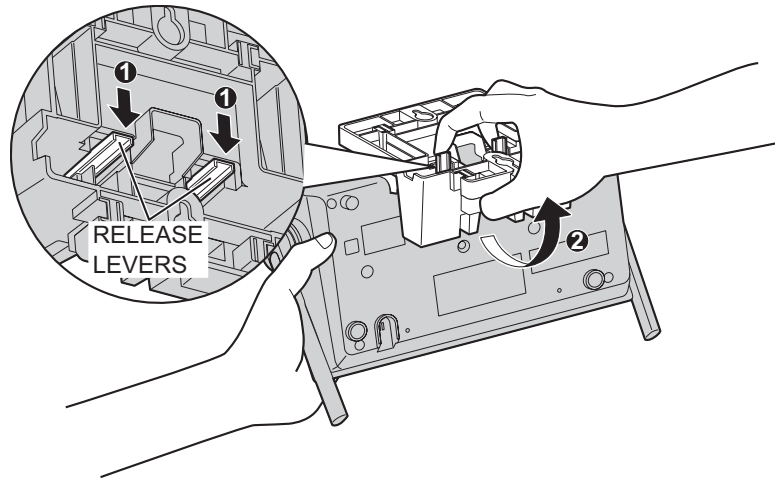

Direct Commands

Handset

After pressing **[MENU]**, you can also program menu items directly by pressing **[0]** to **[9]**, **[*]** and **#** instead of using the soft keys.

Menu item	Command	Selection items	Page
Ringer volume	[1] [1]	[0] : Off [1] : Low [2] : Medium [3] : High	p. 16
Ringer tone (Handset)	[1] [2]	[1]–[3] : Tone pattern 1–3 [4]–[7] : Melody pattern 1–4	p. 17
Incoming call tone (Handset)	[1] [3]	[1] : On [2] : Twice [0] : Off	p. 54
Voice enhancer	[5]	[1] : On [0] : Off	p. 24
Dial lock	[6]	Go to Step 3 on page 55.	–
Talking Caller ID (Handset)	[9]	[1] : On [0] : Off	p. 29
Copy phone book –Copy 1 item	# [1]	Go to Step 4 on page 39.	–
Copy phone book –Copy all items	# [2]	Go to Step 4 on page 40.	–
LCD contrast	[0] [1]	[1]–[6] : Level 1–6	p. 19
Key tone	[0] [2]	[1] : On [0] : Off	p. 52
Auto talk	[0] [3]	[1] : On [0] : Off	p. 19
Set area code	[0] [4]	Go to Step 4 on page 20.	–
Set dial mode	[0] [5] [1]	[2] : Tone	p. 21
Set recall time	[0] [5] [2]	[1] : 700 ms [2] : 600 ms [3] : 400 ms [4] : 300 ms [5] : 250 ms [6] : 110 ms [7] : 100 ms [8] : 90 ms	p. 53
Set line mode	[0] [5] [3]	[1] : A [2] : B	p. 21
Room monitor (Handset)	[0] [9]	[1] : On [0] : Off	p. 49
Ringer tone (Base unit)	[0] [*] [1]	[1]–[3] : Tone pattern 1–3 [4]–[7] : Melody pattern 1–4	p. 18
Incoming call tone (Base unit)	[0] [*] [2]	[1] : On [2] : Twice [0] : Off	p. 54
Room monitor (Base unit)	[0] [*] [3]	[1] : On [0] : Off	p. 49

Direct Commands

Menu item	Command	Selection items	Page
Talking Caller ID (Base unit)	[0] [*] [4]	[1] : On [0] : Off	p. 29
Handset registration	[0] [0] [1]	Go to Step 5 on page 64.	—
Handset deregistration	[0] [0] [2]	[3] [3] [5]	p. 63

During programming:

When "**SAVE**" or "**OK**" is displayed, press the right soft key to **save the new settings**.

To exit programming, press **[OFF]**.

- If you press the direct command incorrectly, press **[OFF]**, then re-enter programming mode by pressing **[MENU]**.
- For function details, see the corresponding pages.

Cancelling Registration/Re-registration

Cancelling the Handset Registration **Handset**

If you no longer need to use the handset or if you want to use the handset with a different base unit of the same model, it is necessary to cancel the handset's registration from the current base unit.

Only one handset can be cancelled at a time.

Make sure the handset and the base unit near each other and are not being used.

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Initial setting

3 Scroll to "Registration" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Registration

4 Scroll to "Deregistration" by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Deregistration


5 Press **[3][3][5]** to delete the registration memory.

- If you enter a wrong code, re-enter **[3][3][5]**.

Deregistration
Enter code:335
:335

6 Press the soft key (**OK**).

- The registration memory will be erased on both the handset and the base unit.
- If the handset beeps 3 times, you entered a wrong code. Enter "335", then press the soft key (**OK**).
- To register the handset to another base unit of the same model, start from step 5 on page 64.

Ex. Extension number 2
Handset [2]  [-]
Deregistered

- "[-]" is shown on the top right of the display.
- After cancelling registration, the handset cannot be used. If you want to use it again, register the handset to the base unit by performing steps 5 and 6 on page 64.

Cancelling Registration/Re-registration

Re-registering the Handset **Handset & Base Unit**

If you want to re-register the handset to the base unit or a different base unit of the same model, you need to register it to that base unit. The handset will be given a new extension number of that base unit. Only one handset can be registered at a time near the base unit.

Make sure the base unit and the other handsets are not being used. Have both the handset and base unit nearby during registration.

If you have cancelled handset registration at a previous base unit (p. 63), start from step 5.

1 Handset: Press **[MENU]**.

2 Handset: Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Initial setting

3 Handset: Scroll to "Registration" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Registration

4 Handset: Press the soft key **(SELECT)** at "HS registration".

HS registration

5 Base unit:

- Press and hold **[LOCATOR/INTERCOM/TRANSFER]** for 3 seconds.
- The CHARGE indicator flashes. After the CHARGE indicator starts flashing, the rest of the procedure must be completed within 1 minute.

6 Handset:

- Press the soft key **(OK)**.
 - Wait until a long beep sounds and the display shows the new extension number (ex. extension number 2).
- Registration is complete.

Press LOCATOR
on base unit
for 3 sec.
Then press OK↓

OK

Handset [2]
Registered

- You can stop registration by pressing **[OFF]** on the handset and pressing **[LOCATOR/INTERCOM/TRANSFER]** on the base unit.

Cancelling Registration/Re-registration

If you have not cancelled the handset's registration at the previous base unit (p. 63), the handset number remains in that base unit's memory. To erase the handset number from the previous base unit, see the base unit's Operating Instructions. For the KX-TG5230AL base unit: (1) Press and hold **[LOCATOR/INTERCOM/TRANSFER]** for 3 seconds, and (2) Press and hold the handset number **[1] (/)** to **[4] (/)** that you do not want for 5 seconds. A long beep sounds, then the handset number is erased.

If the Following Appear on Your Display...

The following will be displayed when the unit needs your attention.

Display message	Cause & Remedy
Recharge battery	<ul style="list-style-type: none"> The battery needs to be charged. Recharge the battery (p. 13).
Charge for 6 HRS	<ul style="list-style-type: none"> The battery has been discharged. The handset will not work. Fully charge the battery (p. 12).
No link to base. Move closer to base and try again.	<ul style="list-style-type: none"> The handset has lost communication with the base unit. Walk closer to the base unit, and try again. Confirm the base unit's AC adaptor is plugged in. Raise the base unit antennas. The handset's registration may have been cancelled. Re-register the handset (p. 64).
Please lift up and try again.	<ul style="list-style-type: none"> A handset button was pressed while the handset was on the base unit (or the charger, for accessory handset users, p. 3). Lift the handset and press the button again.
Busy	<ul style="list-style-type: none"> The called base unit or handset is in use. Privacy mode is on for the call you tried to join (p. 51). The handset you tried to send phone book items to is in use. The handset you are calling is too far from the base unit.
Invalid	<ul style="list-style-type: none"> The called handset has not been registered to the base unit. You selected your own extension number.

If the Following Appear on Your Display...

Display message	Cause & Remedy
Error!!	<ul style="list-style-type: none"> When you tried to register or deregister the handset, the handset and base unit could not link for some reason, such as interference from electrical appliances. Move the handset and base unit away from any electrical appliances and try again. If more than one handset is in use, you may not be able to register/deregister. Try again later. Another handset tried to send phone book items to you but copying stopped. Have the other handset user re-send the items to you (p. 39, 40).
System is busy. Please try again later.	<ul style="list-style-type: none"> If more than one other user is using the handset and/or base unit, such as conducting outside/intercom calls, you may not be able to use the handset. Try again later. The handset has lost communication with the base unit. Walk closer to the base unit and try again.
Phone book full	<ul style="list-style-type: none"> When you tried to store an item in the phone book, the phone book memory was full. Press [OFF] to exit programming mode. To erase other items from the phone book, see page 38.
---Incomplete--- Tom Jones 0987654321 Phone book full (The name/number is an example.)	<ul style="list-style-type: none"> When the displayed item was sent to the destination handset, the phone book memory was full and copying stopped. If you tried to send all of the items, the item displayed with "Incomplete" and items after it have not been copied to the destination handset. Press [OFF] to exit (p. 39, 40). To erase items from the destination handset phone book, see page 38. You can copy all of the items again or copy the items which have not been copied one by one (p. 39, 40).
---Incomplete--- Tom Jones 0555654321 (The name/number is an example.)	<ul style="list-style-type: none"> The destination handset is out of area. The destination handset user may have pressed [↶] or [↷].
Phone book No items stored	<ul style="list-style-type: none"> Your phone book is empty. No items were copied to the destination unit.
Denied	<ul style="list-style-type: none"> The Room Monitor feature is turned off on the destination handset or base unit and cannot be monitored (p. 49). The called handset was on the base unit. The handset must be off the base unit to be monitored.

If the Following Appear on Your Display...

Display message	Cause & Remedy
Save error	<ul style="list-style-type: none">• The entered password was wrong in programming the dial lock. Enter the correct password.
Dial locked	<ul style="list-style-type: none">• The dial lock is turned on. If necessary, turn the dial lock off (p. 56).
Invalid. Please register to the base unit	<ul style="list-style-type: none">• The handset you tried to call has not been registered to the base unit. Register the handset (p. 64, steps 5 and 6).
Error!! 4 handsets have already been registered.	<ul style="list-style-type: none">• 4 handsets have already been registered to the base unit. To cancel a handset's registration, see page 63.• You may have registered one of your handsets to another base unit without deleting its registration to this base unit. Erase the handset's registration from the base unit. For the KX-TG5230AL base unit:<ul style="list-style-type: none">(1) Press and hold [LOCATOR/INTERCOM/TRANSFER] for 3 seconds, and(2) Press and hold the handset number [1] (/) to [4] (/) that you do not want for 5 seconds. A long beep sounds, then the handset number is erased.

Troubleshooting

If the handset display shows error messages, see “If the Following Appear on Your Display...” (p. 65–67) for the Cause & Remedy.

Problem	Cause & Remedy
“No link to base. Move closer to base and try again.” is displayed and an alarm tone sounds.	<ul style="list-style-type: none"> • The handset has lost communication with the base unit. Walk closer to the base unit, and try again. • Confirm the base unit’s AC adaptor is plugged in. • Raise the base unit antennas. • The handset’s registration may have been cancelled. Re-register the handset (p. 64).
The handset and/or base unit does not work.	<ul style="list-style-type: none"> • Check the settings (p. 11–13). • Fully charge the battery (p. 12). • Clean the charge contacts and charge again (p. 13). • Check battery installation (p. 12). • Unplug the base unit’s AC adaptor to reset it. Plug in, and try again. • The handset has not been registered to the base unit. Register the handset (p. 64, steps 5 and 6). • Re-install the battery (p. 12) and fully charge it. • KX-TG5230AL is not designed to be used with rotary (pulse dialling) services.
Static, sound cuts in/out, fades. Interference from other electrical units.	<ul style="list-style-type: none"> • Move the handset and base unit away from other electrical appliances (p. 6). • Walk closer to the base unit. • Raise the base unit antennas. • Turn on the Clarity Booster feature (p. 24). • Your unit is connected to a telephone line with ADSL service. We recommend connecting a noise filter (contact your ADSL service provider) to the telephone line between the base unit and the telephone line jack.
The base unit and/or handset does not ring.	<ul style="list-style-type: none"> • The ringer volume is turned off. Set to high, medium, or low (p. 16, 17). • If more than one other user is using the handset and/or base unit, the handset/base unit may not ring. Users will hear incoming call tones (p. 54).
The handset display is blank.	<ul style="list-style-type: none"> • If the handset display is blank, fully charge the battery (p. 12).

Troubleshooting

Problem	Cause & Remedy
You cannot program any function items.	<ul style="list-style-type: none">• Programming is not possible while the handset and/or base unit is being used.• Do not pause for over 60 seconds while programming.• Walk closer to the base unit.• When the dial lock is turned on, you cannot store phone numbers (p. 34, 41). To turn the mode off, see page 56.
While programming or searching, the handset or base unit starts to ring and the program/search stops.	<ul style="list-style-type: none">• A call is coming in. To answer the call, press [END], [H] or [SP-PHONE]. Start again from the beginning after hanging up.
You cannot make an intercom/outside call.	<ul style="list-style-type: none">• If more than one other user is using the handset and/or base unit, you may not be able to make a call. Try again later.• The handset you called is too far from the base unit.• You cannot make an outside call when the dial lock is turned on. To turn the mode off, see page 56.• Set the dialling mode to "Tone" (p. 21).
You cannot redial.	<ul style="list-style-type: none">• If the last number dialled was more than 48 digits long, the number will not be redialled correctly.• The [REDIAL/PAUSE] button on the base unit functions as either redial or pause. It will redial the last number dialled if pressed before dialling any digits (p. 25). If another number has been dialled first, it will operate as a pause button (p. 51).• You cannot redial when the dial lock is turned on. To turn the mode off, see page 56.

Troubleshooting

Problem	Cause & Remedy
The handset does not display the caller's phone number.	<ul style="list-style-type: none"> • You need to subscribe to Caller ID. • Other telephone equipment may be interfering with your phone. Disconnect it and try again. • Other electrical appliances connected to the same outlet may be interfering with Caller ID. • Telephone line noise may be affecting Caller ID. • The caller requested not to send his/her Caller ID information (p. 27). • If a call is being transferred to you, the Caller ID information will not be displayed. • If a (separate) Caller ID box is connected between the base unit and the telephone wall jack, disconnect the Caller ID box or plug the unit directly into the wall jack. • Some of PBX units may not support Caller ID. Please consult with your PBX supplier. • The calling party does not subscribe to Caller ID services. • Your unit is connected to a telephone line with ADSL service. We recommend connecting a noise filter (contact your ADSL service provider) to the telephone line between the base unit and the telephone line jack.
The handset and/or base unit does not announce the displayed caller's name.	<ul style="list-style-type: none"> • The handset and/or base unit ringer volumes are turned off. Set to high, medium, or low (p. 16, 17). • The Talking Caller ID feature is turned off. Turn it on (p. 29).
The handset and/or base unit does not announce the displayed caller's name properly.	<ul style="list-style-type: none"> • Name pronunciation may vary. • The handset and/or base unit will announce each letter of abbreviations, such as "Co." and "Inc." • Caller ID supports names of up to 15 letters. If the caller's name has more than 15 letters, the name will not be announced correctly.
The handset display exits the Caller List or phone book.	<ul style="list-style-type: none"> • Do not pause for over 60 seconds while searching.
"Recharge battery" is displayed, "■" flashes, or the handset beeps intermittently.	<ul style="list-style-type: none"> • Fully charge the battery (p. 12).

Troubleshooting

Problem	Cause & Remedy
"Charge for 6 HRS" and "■" are displayed and the handset does not work.	<ul style="list-style-type: none">• The battery has been discharged. Fully charge the battery (p. 13).
You charged the battery fully, but "Recharge battery" is still displayed and/or "■" continues to flash, or "Charge for 6 HRS" and "■" are displayed.	<ul style="list-style-type: none">• Clean the charge contacts and charge again (p. 13).• The battery may need to be replaced. If you install a new battery, fully charge it (p. 12, 13).
The CHARGE indicator does not go out after the battery has been charged.	<ul style="list-style-type: none">• This is normal.
You cannot have a conversation using the headset.	<ul style="list-style-type: none">• Make sure the optional headset is connected properly (p. 57).• If "SP-phone" is displayed on the handset, press [↶] to switch to the headset.• Please use only the Panasonic KX-TCA88AL headset.

Panasonic Australia operates a toll free Customer Support Centre.
Please phone Panasonic on 132600 for assistance.

Safety Instructions

Take special care to follow the safety suggestions listed below.

Safety

- 1) The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit.
- 2) When left unused for a long period of time, the base unit should be unplugged from the household AC outlet.
- 3) To minimize the possibility of lightning damage when you know that a thunderstorm is coming, we recommend that you:
 - a) Unplug the telephone line cord from the phone jack.
 - b) Unplug the power supply cord from the AC power outlet.

Installations

Environment

- 1) Do not use this unit near liquids— for example, near a bathtub, washbowl, sink, etc. Damp environments should also be avoided.
- 2) The unit should be kept away from heat sources such as heaters, kitchen stoves, etc. It also should not be placed in rooms where the temperature is less than 5°C or greater than 40°C.
- 3) The AC adaptor is used as the main disconnect device, ensure that the AC outlet is located/installed near the unit and is easily accessible.

Placement

- 1) Do not place heavy objects on top of this unit.
- 2) Care should be taken so that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration or shock.
- 3) Place the unit on a flat surface.

For best performance

- 1) If noise prevents the conversation from being understood at the handset, approach the base unit to lessen the noise.
- 2) The handset should be used at the HIGH volume setting when the reception audio is difficult to hear.
- 3) The handset should be fully recharged on the base unit when "Recharge battery" is displayed and/or "■" flashes.
- 4) The handset antenna should not be touched during use because it can effect the handset's performance.
- 5) The maximum calling distance may be shortened when the unit is used in the following places: Near obstacles such as hills, tunnels, undergrounds, near metal objects such as wire fences, etc.

Medical

Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The unit operates in the frequency range of 5760 MHz to 5840 MHz, and the power output level can range from 0.25 watts to 0.5 watts.) Do not use the unit in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF (radio frequency) energy.

Operating near 5.8 GHz electrical appliances may cause interference.

Move away from the electrical appliances.

Safety Instructions

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO LIQUID OR ANY TYPE OF MOISTURE.

If there is any trouble, disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, do not reconnect the unit to the telephone line until the fault has been repaired. If the known working phone does not operate properly, consult your telephone company.

This equipment has been tested and found to comply with AS/NZS 3548: 1995 limits for electromagnetic interference. Any modifications to any part of the system or to any peripherals may void the EMC compliance of the system or the peripherals.

This equipment will be inoperable if mains power fails.

The earcap on the handset is magnetised and may retain metallic objects.

Specifications

■ Handset

Power Supply:	Ni-MH battery (3.6 V, 830 mAh)
Frequency:	5.76 GHz – 5.84 GHz
Dimensions (H x W x D):	Approx. 220 mm x 53 mm x 37 mm
Mass (Weight):	Approx. 210 g
Security Codes:	1,000,000

■ Base Unit

Power Supply:	AC adaptor (230 – 240 V AC, 50 Hz)
Power Consumption:	Standby: Approx. 2.5 W Maximum: Approx. 6.0 W
Frequency:	5.76 GHz – 5.84 GHz
Dimensions (H x W x D):	Approx. 107 mm x 251 mm x 135 mm
Mass (Weight):	Approx. 470 g

■ Operating Environment: 5 °C – 40 °C

Specifications are subject to change without notice.

Important Information

Instructions to customer

Installation

Attached to this apparatus is an approval label. This label is evidence that it is a "Permitted Attachment" which has been authorised to be connected to your telephone service.





Conditions relating to connection and operation of this Permitted Attachment are contained in Telecommunications General By-Law 220 (5).

You are authorised to install this Permitted Attachment yourself by plugging it into the line socket of any regular telephone. You may connect it in place of your existing telephone or to any spare telephone socket installed in your premises.

To disconnect your existing telephone you must first remove its plug from the line socket. You can then insert the plug of your Permitted Attachment into the socket and use your equipment.

If the plug of your existing telephone cannot be readily removed, you will have to remove the screw securing it. To do this proceed as follows:

1. Loosen screw "A" sufficiently to remove the socket cover. (See Fig. 1.)
2. Remove screw "B" and withdraw the plug. (See Fig. 2.)
3. Replace screw "B". (See Fig. 3.) Ensure that it screws completely into the socket recess. (If the screw is too long, increase the hole depth or replace the screw with one 5 mm shorter.)
4. Replace socket cover and tighten screw "A". (See Fig. 4.)

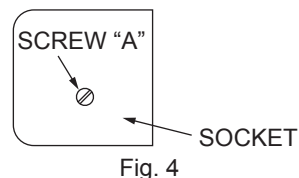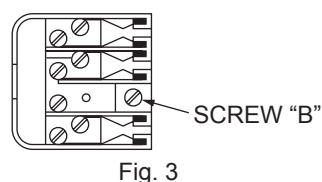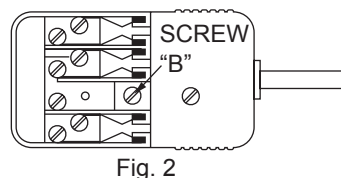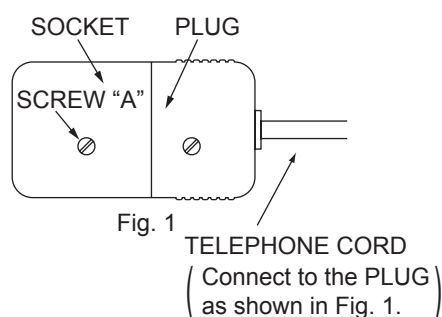

Important Information

If you are satisfied with the operation of your telephone service after plugging in your Permitted Attachment, your installation is completed.

You will be unable to connect this Permitted Attachment if your telephone service consists only of a wall phone or an old style telephone which is not connected by means of a modern plug and socket. In such cases a new socket will need to be installed.

Should the Permitted Attachment not operate when plugged into a socket, it is either faulty or unsuitable for operation with your telephone service. It should be returned to the store where purchased or an Authorised Service Centre.

Service difficulties

 
 

 
If at any time a fault occurs on your telephone service carry out the following checks before you call for service:

- Disconnect the Permitted Attachment and try using the service, with the normal telephone.
- If the telephone service then operates satisfactorily, the fault is in your Permitted Attachment. Leave the Permitted Attachment disconnected and report the fault to its supplier or agent to arrange for repair.
- If when using the telephone the service is still faulty, report the fault to "Service Difficulties and Faults" for attention.

You are required to keep this Permitted Attachment in good working order while it is connected to your telephone service. Its construction or internal circuit must not be modified in any way without permission.

WARNING

This cordless telephone system does not incorporate provision for secrecy of conversations. Appropriately tuned radio equipment and other cordless telephone systems in close proximity may be used by a third party to monitor and possibly interrupt conversations in progress when this system is on radio operation.

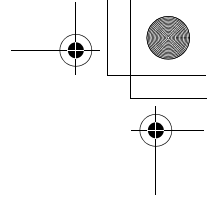

 **N52**

Sales Department:

Panasonic Australia Pty. Limited

Austlink Corporate Park, 1 Garigal Road, Belrose NSW 2085, Australia

Manufacturer:

Panasonic Communications Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

© 2004 Panasonic Communications Co., Ltd. All Rights Reserved.

PQQX14274YA S0504-1064

